DA-E750
DA-E751

Wireless Audio with Dock

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more a complete service,
please register your product at
www.samsung.com/register

SAMSUNG

features

AllShare Play

Play music saved on your devices (such as your PC, Smart phone, or NAS) through the Wireless Audio with Dock via a network connection.

AirPlay

Play music saved on your Apple devices on the Wireless Audio with Dock.

Dual Docking Audio Speaker System

Using the system's dual docking station, dock, charge, and then play either Samsung Galaxy devices or Apple devices through the system's built-in speakers.

USB Host support

Connect and play music files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Wireless Audio with Dock's USB HOST function.

Bluetooth Function

Connect a Bluetooth device to the Wireless Audio with Dock and enjoy music from the device with high quality stereo sound, all without wires!

aptX®

aptX enables high quality Bluetooth stereo audio, delivering wired audio quality wirelessly.

LICENSE

AirPlay, AirPlay logo, iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

safety information

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.

This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION
- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

PRECAUTIONS

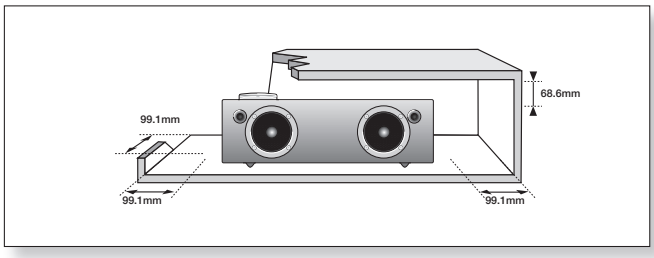

Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (70~100 mm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

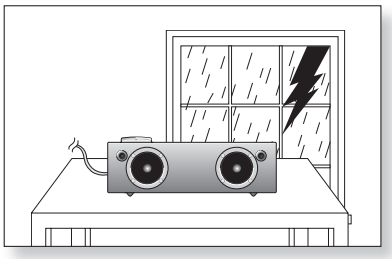

During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

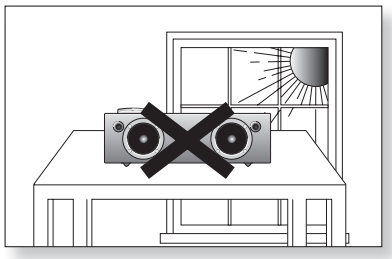

Do not expose the unit to direct sunlight or other heat sources. This could cause the unit to overheat and malfunction.

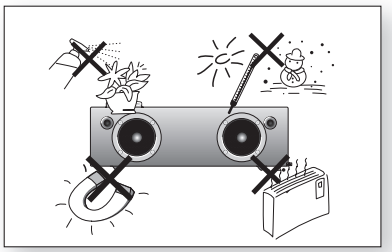

Protect the product from moisture (i.e. vases) , and excess heat (e.g.fireplaces) or equipment creating strong magnetic or electric fields Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. This product is for personal use only.

Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

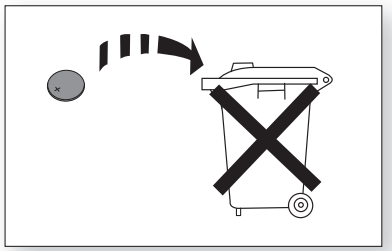

The batteries used with this product contain chemicals that are harmful to the environment.
Do not dispose of batteries in the general household trash.

contents

ENG

FEATURES 2

2 Features
2 License

SAFETY INFORMATION 3

3 Safety warnings
4 Precautions

GETTING STARTED 6

6 Before reading the user's manual
6 What's included

DESCRIPTIONS 7

7 Top/Front/Rear Panel

REMOTE CONTROL 9

9 Tour of the remote control

POWER ON AND VOLUME CONTROL 10

10 Turning the Power on/off
10 Adjusting the volume

CONNECTIONS 11

11 Installing the Toroidal Ferrite on the Power Cable
12 Using the Spacer Cover
13 Connecting a device to the Dual Dock
14 Connecting an audio device using AUX IN
15 Connecting to your Network
21 Connecting to Bluetooth devices

PLAYING 23

23 Using the TV mode (SoundShare)
23 Using the docking mode with Samsung Galaxy and Apple Devices
25 Using the Bluetooth mode
26 Using the USB mode
27 Using AirPlay and AllShare Play mode

FUNCTIONS 28

28 Basic functions
29 Advanced functions
30 Software upgrade (only USB mode)

TROUBLESHOOTING 31

31 Troubleshooting

APPENDIX 32

32 Specifications

getting started

BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be canceled.
	Note	Indicates tips or instructions on the page that help a function operate.

Safety Instructions and Troubleshooting

1) Familiarise yourself with the Safety Instructions before using this product. (See page 3)
2) If a problem occurs, check Troubleshooting. (See page 31)

Copyright

©2012 Samsung Electronics Co.,Ltd.

All rights reserved; no part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.

WHAT'S INCLUDED

Check for the supplied accessories shown below.

Remote Control / Lithium Battery (3V)

Power Cable



Audio Cable

User Manual



(Large)
(For Power Cable 1EA)

Toroidal Ferrite Core



Spacer Cover/
Protection Cover

Cloth

▪ The appearance of the accessories may differ slightly from the illustrations above.

descriptions

TOP/FRONT/REAR PANEL

<TOP>

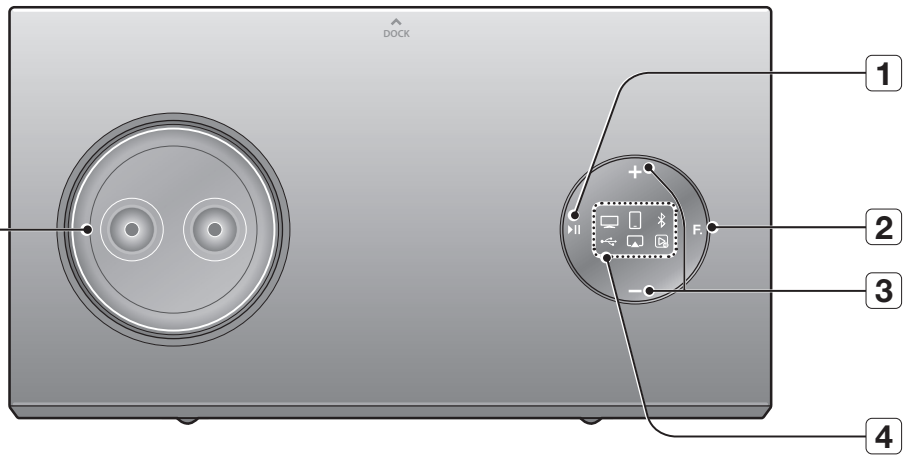

<FRONT>

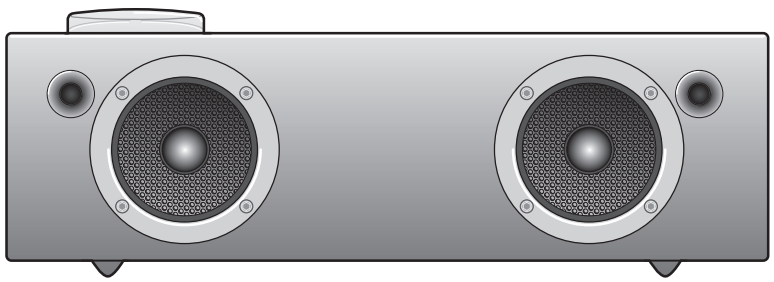

<REAR>

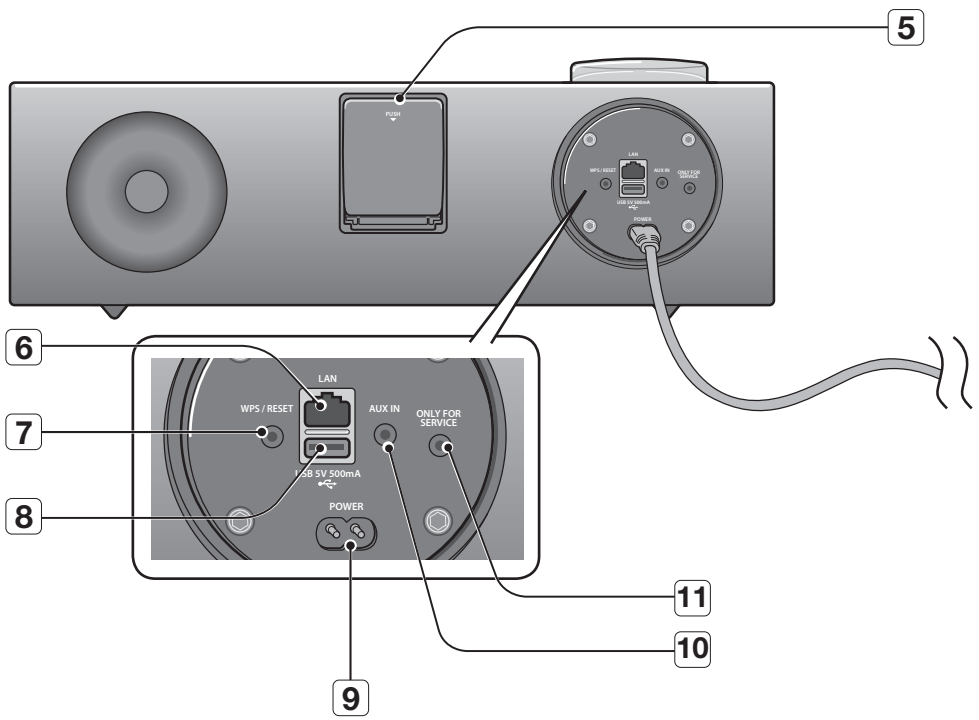

1	PLAY/PAUSE BUTTON	Play or pause a music file.
2	FUNCTION BUTTON	Switches the mode as follows : → → → → → → AUX (LED Off)
3	VOLUME +/- BUTTON	Controls the volume level.
4	FUNCTION DISPLAY	When you change the mode with the Function button, the icon of the selected mode is displayed in white on the Function Display. The LED blinks when you turn the power on and stops blinking when the unit is on and ready to play.
5	DUAL DOCK	Provides a 5 pin dock for Samsung Galaxy devices and a 30 pin dock for Apple devices.
6	LAN TERMINAL	Lets you connect to a network using a LAN cable.
7	WPS/RESET BUTTON	Used in procedures for connecting the unit to wireless networks.
8	USB PORT	Connect an external USB storage device such as an MP3 player here to play files located on the device.
9	POWER JACK	Connect the power cord to this product.
10	AUX IN	Connect to the Analog output of an external device.
11	ONLY FOR SERVICE	This jack is for service only.

- When you turn on this unit, it needs about 20 seconds to heat-up the Vacuum tube and produce stable sounds.
- To update the product's software via USB port, it is required to use a USB memory device.

- When holding or moving the product, care must be taken as there is located the woofer speaker in the bottom of the product.
- This unit can connect to mobile devices with high audio output levels. When you connect this unit to external devices with high output levels, it may lower the audio output to protect the amp and speakers.
- When disconnecting the power cable from the wall outlet, hold the plug.
  Do not pull the cable.
- If you put other electronic products on top of the product, audio from the product may be distorted.
- Please make sure children do not touch the product's surface when the product is on.
  The surface will be hot.

remote control

TOUR OF THE REMOTE CONTROL

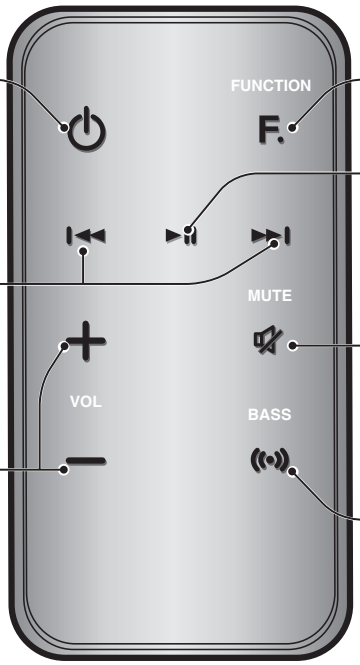

POWER BUTTON
Turns the unit on and off.

FUNCTION BUTTON
Selects the Function mode.

PLAY/PAUSE BUTTON
Play or pause a music file.

CONTROL BUTTON
Search for the next or previous music file.

MUTE BUTTON
Mutes the sound from this unit. Press again to restore the sound to the previous volume level.

VOLUME
Adjusts the volume level of the unit.

BASS BUTTON
Optimise the sound based on your tastes.

Installing battery in the Remote Control

1. Open the cover of the remote control by putting your fingernail into the gap between the cover and body of the remote control. Then, lift the cover and separate it completely.
2. Install a 3V Lithium battery. Insert the battery into the battery compartment with the + side facing up.
3. Fit the remote control's cover to the remote control. Next, lower the cover so that it is flush with the body of the remote, and then press the cover into the body by pushing the edges down with your hand.

▪ Be careful not to catch your fingernail in the gap when you lift the cover. You can damage your fingernail.

Operation Range of the Remote Control

You can use the remote control up to 7 meters (23 feet) in a straight line from the unit. You can also operate the remote at a horizontal angle of up to 30° from the remote control sensor.

power on and volume control

TURNING THE POWER ON/OFF

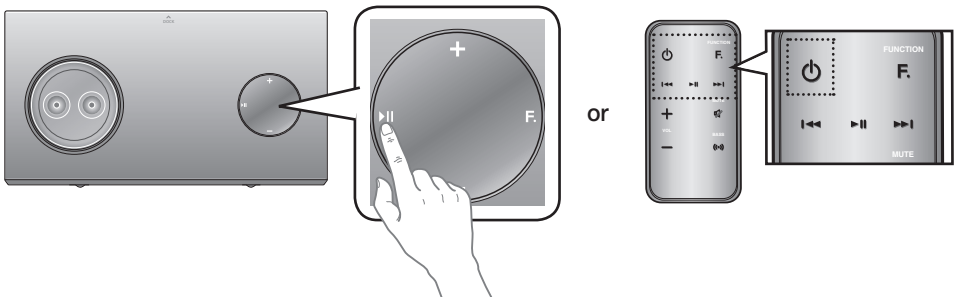

1. To turn on this unit, press any button on the unit's top panel when the unit is in Standby mode.

or,

Press **POWER** on the remote control.

2. To turn off this unit, press the ►II button on the unit's top panel for more than 3 seconds.

or,

Press **POWER** on the remote control again.

- **It will take about 20 seconds until the power of the unit turns on because of the preheating time of the amplifier.**

ADJUSTING THE VOLUME

Use +,- buttons to adjust the volume. The function LEDs light from left to right when you turn the volume up and from right to left when you turn the volume down. The LEDs do not light if you try to increase the volume when it has already been set to maximum or try to decrease the volume when it has already been set to minimum.

Press the **+/–** button on the right side of the top panel.

or,

Press **VOL +/–** on the remote control.

- The volume level increases or decreases when you press VOL +/–.
- You can also use the volume controls of devices connected using the Dual Dock or Bluetooth to control the volume. However, your ability to control the volume using the volume controls of devices connected using Bluetooth may be limited.

connections

INSTALLING THE TOROIDAL FERRITE ON THE POWER CABLE

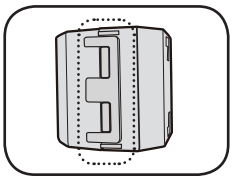

Lift up to release the lock and open the core.

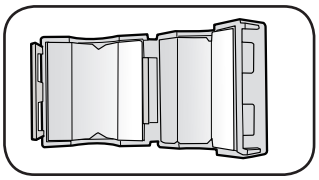

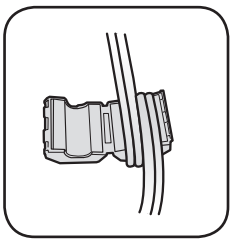

Wind Power cable around the core three times.
(Start winding at 5-10cm away from the plugs)

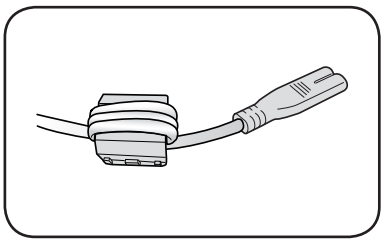

Close the lock back.

USING THE SPACER COVER

Attach the space cover if you want to dock a Samsung Galaxy or Apple device having no protective case onto the Dual Dock.

- Use it for stable installation of your device considering the shape of the device.

The Dual Dock also comes with a protective cover for the 30-pin Apple device connector. Use the protective cover for the 30-pin connector when you attach the 5-pin Samsung Galaxy device.

See the illustrations below for additional instructions.

<For Apple Device Users>	<For Galaxy Device Users>
When docking a device, use appropriate support considering the docking device's protective case or the device's shape for further stability.	
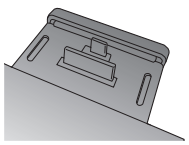	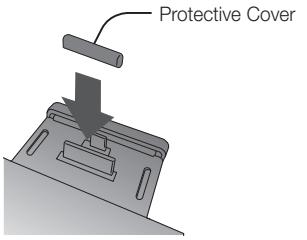
Used for docking devices having no protective case on it.	
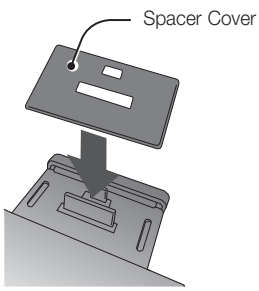	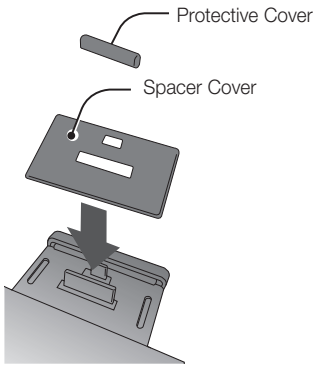

- It is impossible to attach a device to the Dual Dock that has a case thicker than 1.5 mm or an unusual rounded bottom.

CONNECTING A DEVICE TO THE DUAL DOCK

How to connect a device to the Dual Dock.

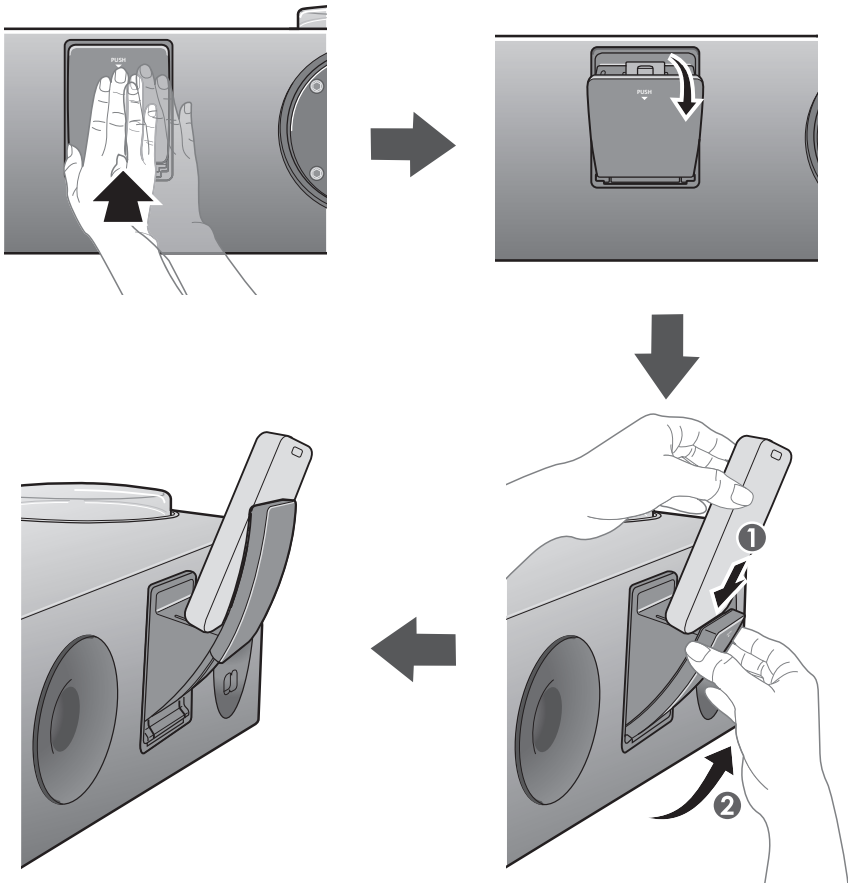

1. The **DUAL DOCK** is located on the back of the product. To open, push it in gently.

2. Press the **F.** button on the top panel of the Wireless Audio with Dock repeatedly until the icon appears in the display.

- Each time you press the button, the selection changes as follows :
  → → → → → → **AUX (LED Off)**
- The selected mode is displayed in white in the Function Display.

3. If you have a Samsung Galaxy device, connect the device to the 5 pin (smaller) connector to connect to the Dual Dock. If you have a Apple device, connect the device to the 30 pin (larger) connector on the Dual Dock.

4. Lift the device support up as shown to prevent the device from sliding or falling off the Dual Dock.

- Turn on your Samsung Galaxy device before you attach it to the Dual Dock.
- This unit doesn't support the simultaneous docking of Samsung Galaxy and Apple devices.
- Connect your Samsung Galaxy or Apple device to the Dual Dock before starting Docking mode. (See page 23)

CONNECTING AN AUDIO DEVICE USING AUX IN

This section explains how to connect the unit to an audio device.

This unit is equipped with one audio analog jack for connecting an audio device.

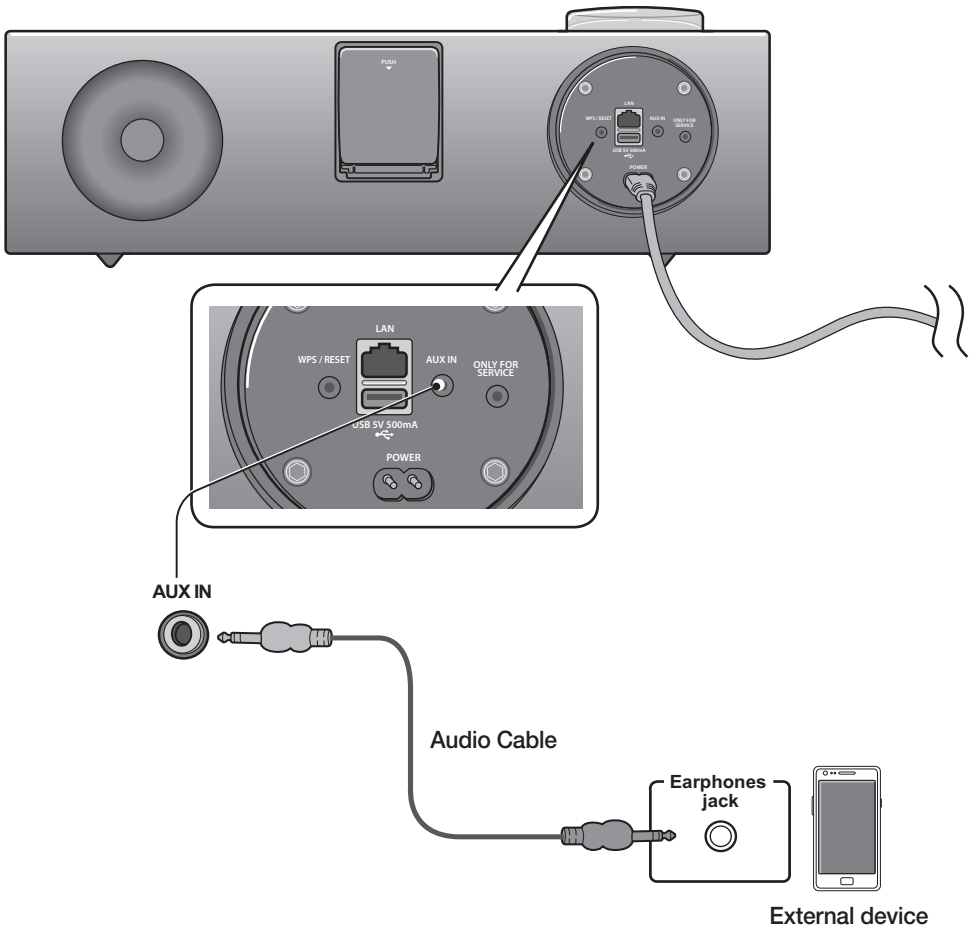

AUX IN

1. Connect AUX IN (Audio) on the back of the unit to the earphone jack of the external device or audio device.

2. Press the **F.** button repeatedly until the function LEDs are off.

- The AUX mode is active when no function LED is lit.

▪ Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

CONNECTING TO YOUR NETWORK

You can connect your Wireless Audio with Dock to your network router using one of the methods illustrated on the next few pages.

To connect the Wireless Audio with Dock to a Wired Network

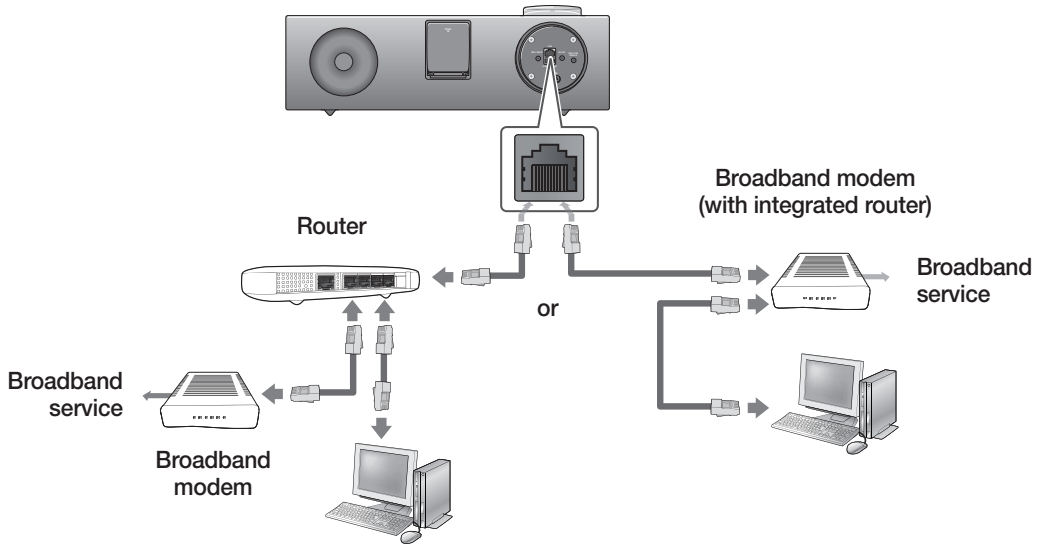

Please turn off the power of the Wireless Audio with Dock before you connect the LAN Cable.

1. Turn off the Wireless Audio with Dock.

2. Connect the Wireless Audio with Dock to the router using a LAN cable.

3. Turn on the Wireless Audio with Dock.

4. Press the **F.** button on the top panel of the Wireless Audio with Dock repeatedly until the or icon appears in the display.

- Each time you press the button, the selection changes as follows :
  → → → → → → **AUX (LED Off)**

5. The or indicator lights up in red, and changes to solid white once the Wireless Audio with Dock connects to the router.

- If you connected the LAN cable when the product is on, turn the product off, then turn it on again.
- If failed to connect to the network, unplug the LAN cable and connect it again, and restart the product.
- xDSL user needs a router to make a network connection.

To connect the Wireless Audio with Dock to a Wireless Network

This section describes 4 methods of connecting the Wireless Audio with Dock to a wireless network.

- Some of network related operations may be different than explained depending on performance and supported functions of used AP.
- To configure the network connection to your router or modem, see the router or modem's user manual.
- The Wireless Audio with Dock supports the following security protocols:
  - WEP ➞ Open
  - WPA-PSK ➞ TKIP
  - WPA2-PSK ➞ AES
- You can also connect the Wireless Audio with Dock to a network that does not have security and has no password.
- If your wireless router supports DHCP, this Wireless Audio with Dock can use a DHCP or static IP address to connect to the wireless network.
- Select a channel on the wireless router that is not currently being used, if the channel set for the wireless router is currently being used by another device nearby, it will result in interference and communication failure.
- If you select the Pure High-throughput (Greenfield) 802.11n mode and set the encryption type on your router to WEP or TKIP, then the Wireless Audio with Dock will not support a connection in compliance with new Wi-Fi certification specifications.
- Wireless LAN, by its nature, may cause interference, depending on the operating conditions (router performance, distance, obstacles, interference with other radio devices, etc)
- WPS(PBC) / WPS(PIN) does not operate when the security protocol is set to WEP.
- If you fail to set up the network, press and hold the **WPS/RESET** button on the rear panel until the or indicator blinks twice. Wait until the red light stops blinking, turn off and on the unit. And try again.

To connect the Wireless Audio with Dock to your Apple device having iOS 5.0 or above (Info Sharing)

This network set-up method is for users of Apple devices that have iOS 5.0 or later.

1. Connect the Apple device to your network.

2. Select on the Wireless Audio with Dock, and then connect the iPod /iPhone /iPad device to the Dual Dock.

3. Press and hold the **WPS/RESET** button on the rear panel of the Wireless Audio with Dock with a pen tip or similar item for more than 1 second. The icon will blink once. Release the buttom.

4. Select <**Allow**> in the pop-up menu on the display of the Apple device.

5. Change the mode to the and then the indicator will blink in red and changes to solid white. After the Wireless Audio with Dock connects, the indicator stops blinking in red, and glows in white.

- The network connection is complete.

To connect the Wireless Audio with Dock using WPS (PBC)

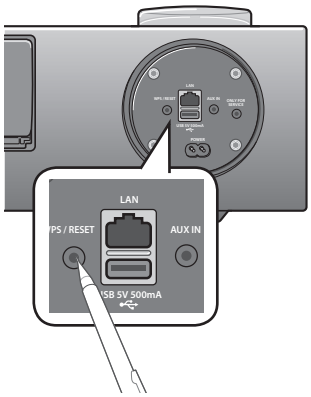

1. Press the **F.** button on the top panel of the Wireless Audio with Dock repeatedly until the or icon appears in the display.
   - Each time you press the button, the selection changes as follows :
     → → → → → → **AUX (LED Off)**
     The indicator changes from white to red and blinks.
2. Press and hold the **WPS/RESET** button on the rear panel with a pen tip or similar item for more than 1 second. The indicator blinks once in white. After the indicator blinks, release the button.
   - The indicator blinks in red.
3. Push the **WPS/RESET** button on your router or modem within 90 seconds.
4. After the Wireless Audio with Dock connects, the or indicator changes from blinking red to white.
   - The network connection is complete.

To connect the Wireless Audio with Dock through a JBC (JukeBox Connect) Connection

1. Press the **F.** button on the top panel of the Wireless Audio with Dock repeatedly until the ⬚ or ⬚ icon appears in the display.

- Each time you press the button, the selection changes as follows :
  ⬚ → ⬚ → ⬚ → ⬚ → ⬚ → ⬚ → **AUX (LED Off)**
  The indicator changes from white to red and blinks.

2. Press and hold the **WPS/RESET** button on the back panel with a pen tip or similar item for more than 5 seconds. The indicator blinks in white once. Wait until the indicator blinks in white twice more, and then release the **WPS/RESET** button.

- The indicator blinks in red, and then stops blinking and glows in red when the unit accesses the Network Setting mode.

3. To connect the Wireless Audio with Dock to the network, search for "**Samsung W_Audio E750 XXXXXXX**" in the Wi-Fi Setting list of your WI-Fi device, and then select it.

ex) Samsung Galaxy Device

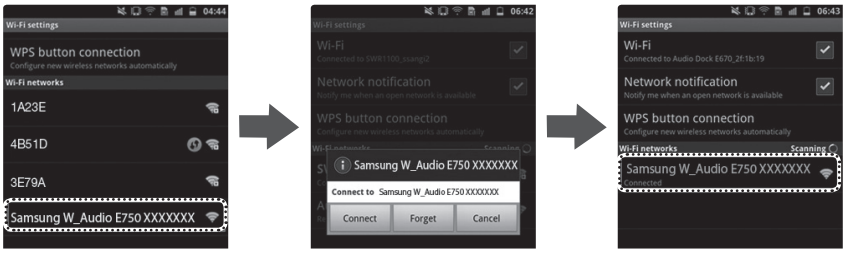

4. Open the web browser of the Wi-Fi device, and then type "**http://192.168.1.1**" into the address bar of the Internet browser to access the Wireless Audio with Dock's web page.

5. In the "**Service Set ID (SSID)**" field, select the AP device (router or modem) your Wi-Fi device is connected to.

6. Type the AP device's password into the "**WPA Passphrase**" filed. If you want to set the static IP, press advanced settings. Fill in the desired static IP address.

7. Press <**Apply**>.
If a warning appears on your Wi-Fi device, click OK.

8. When the connection between the Wireless Audio with Dock and AP you selected is completed, the indicator on the Wireless Audio with Dock changes to white.

- The Wireless Audio with Dock connection is complete.

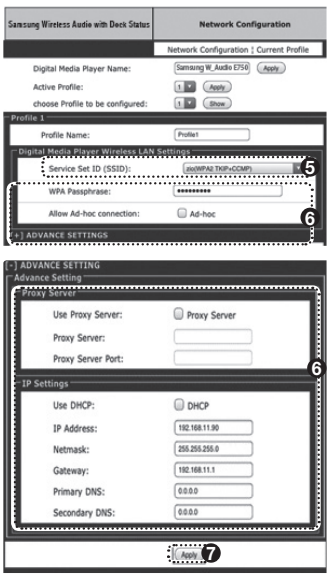

※ The picture above is the screen which will appear on the display after completing the network connection successfully, so you can run AirPlay or DLNA normally.

5:46 PM
Web page not available
http://192.168.1.1/i...
Web page not available
The Web page at http://192.168.1.1/index.asp might be temporarily down or it may have moved permanently to a new web address.
Here are some suggestions:
Check to make sure your device has a signal and data connection
Reload this web page later.
View a cached copy of the web page from Google

To connect the Wireless Audio with Dock using a WPS PIN

1. Press the **F.** button on the top panel of the Wireless Audio with Dock repeatedly until the or icon appears in the display.
   - Each time you press the button, the selection changes as follows :
     → → → → → → **AUX (LED Off)**
     The indicator changes from white to red and blinks.
2. Press and hold the **WPS/RESET** button on the back panel with a pen tip or similar item for more than 5 seconds. The indicator blinks in white once. Wait until the indicator blinks in white twice more, and then release the **WPS/RESET** button.
   - The icon blinks in red, and then stops blinking and glows in red when the unit accesses the Network Setting mode.
3. To connect the Wireless Audio with Dock to the network, search for "**Samsung W_Audio E750 XXXXXXX**" in the Wi-Fi Setting list of your WI-Fi device, and then select it.

   ex) Samsung Galaxy Device

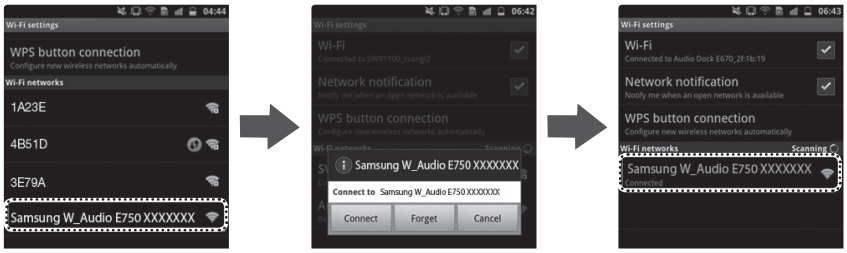

4. Open the web browser of the Wi-Fi device, and then type "**http://192.168.1.1**" into the address bar of the Internet browser.
5. Press or touch Samsung Wireless Audio with Dock Status.
6. The **WPS PIN** number appears on the bottom of the screen. Note or write down the number, and then turn the Wireless Audio with Dock unit off and then on.
7. Access the Wi-Fi set-up page of your AP (wireless router or modem) using your PC or other Internet ready device, and then set the Wi-Fi settings to the PIN method. Refer to the user's manual of your router or modem for instructions.
8. Type the Wireless Audio with Dock's WPS PIN number into the appropriate field of the Wi-Fi setup page.

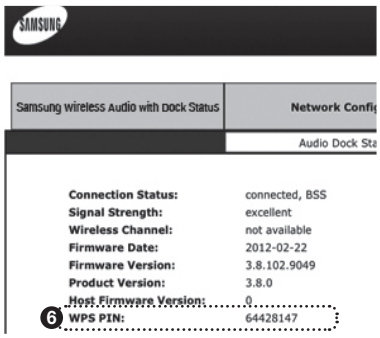

9. Press and hold the **WPS/RESET** button on the back panel of the Wireless Audio with Dock with a pen tip or similar item for more than 10 seconds in the or mode. The indicator blinks once in white, and then twice. Wait until the indicator blinks three times, and then release the button.
   - The icon blinks in red.
10. If the connection between the Wireless Audio with Dock and the AP is completed within 90 seconds, the indicator changes from red to white.
    - The Wireless Audio with Dock connection is complete.

▪ The Wi-Fi Direct function is not supported by this product.
Direct connection may succeed in some cases, but it is not supported function by this product.

BLUETOOTH

You can connect the Wireless Audio with Dock to Bluetooth devices and enjoy music with high quality stereo sound, all without wires!

What is Bluetooth?

Bluetooth technology lets Bluetooth-compliant devices interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
  - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Wireless Audio with Dock.
  - It is subject to electrical variation from obstructions caused by a wall, corner, or by office partitioning.
  - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Keep the Wireless Audio with Dock and the Bluetooth device close together when pairing.
- The further the distance between the Wireless Audio with Dock and Bluetooth device, the worse the quality. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception-sensitivity areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when the Bluetooth device is close to the set. The connection is automatically cut off if the Bluetooth device moves out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

- You may be required to enter a PIN code (password) when connecting the Bluetooth device to the Wireless Audio with Dock. If the PIN code input window appears, enter <0000>.
- The Wireless Audio with Dock supports SBC data (44.1kHz, 48kHz).
- The AVRCP feature is not supported.
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect to a Bluetooth device that supports only the HF (Hands Free) function.
- Only one Bluetooth device can be paired at a time.
- Once you have turned off the Wireless Audio with Dock and the pairing is disconnected, the pairing will not be restored automatically. To reconnect, you must pair the devices again.
- The Wireless Audio with Dock may not search or connect properly in the following cases:
  - If there is a strong electrical field around the Wireless Audio with Dock.
  - If several Bluetooth devices are simultaneously paired to the Wireless Audio with Dock.
  - If the Bluetooth device is turned off, not in place, or malfunctions
  - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.

CONNECTING TO BLUETOOTH DEVICES

This section explains how to connect the Wireless Audio with Dock to Bluetooth compatible TVs and other Bluetooth devices.

To connect the Wireless Audio with Dock to a Bluetooth compatible 2012 Samsung TV (SoundShare)

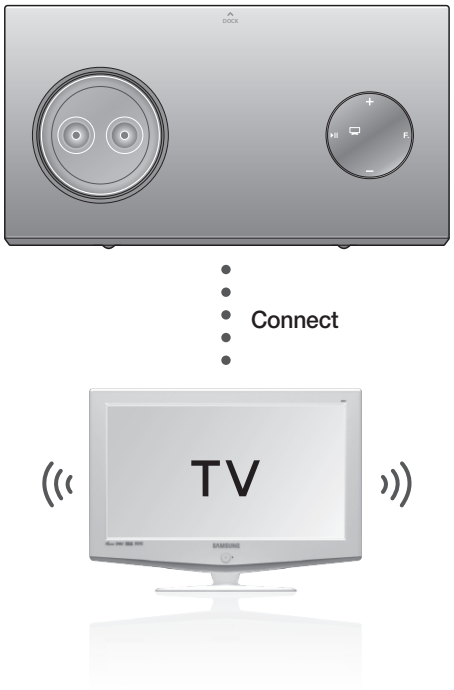

<To pair to your TV>

To produce TV sound on your Wireless Audio with Dock via Bluetooth connection, you need to pair your system to the Bluetooth compliant TV first. Once the pairing is established, the pairing information is recorded and kept and no further Bluetooth connection message will appear from the next time. Keep the Wireless Audio with Dock and the TV close together before pairing. (It is recommended to pair devices within 1 meter.)

1. Turn on the Samsung TV and Wireless Audio with Dock.

- Set "Add New Device" menu to "On" in the TV. (For more information, refer to the user's guide of TV) Menu ➞ System ➞ Device Manager ➞ SoundShare Settings ➞ Add New Device.

2. When you change the mode of Wireless Audio with Dock to ▭, a message asking whether to proceed with Bluetooth pairing appears. Select <**Yes**> on the TV screen, then the pairing with the Wireless Audio with Dock will be completed.

- The ▭ indicator blinks, and stops blinking.
- The Wireless Audio with Dock Bluetooth pairing is complete.

<To cancel pairing to your TV>

If you want to pair your Wireless Audio with Dock to a TV other than the connected TV, you should cancel the existing pairing in the Wireless Audio with Dock. It is possible to cancel the pairing in the way below.

The ▭ LED will blink once when you press the **WPS/RESET** button on the rear panel of the unit for 1 second in ▭. This unit will automatically pair to a TV once you cancel the existing pairing and the new TV is ready for connection.

- If the TV cannot be connected, please try to reconnect it after pressing the WPS/RESET button on the rear panel of the set in the Bluetooth ▭ mode.
- You should update TV software to the latest version to operate TV pairing (SoundShare) function.
- Check the instructions for updating and applicable models from the support page on website (http://www.samsung.com) or contact the call centre.

To connect the Wireless Audio with Dock to a Bluetooth device

Before you begin, confirm that your Bluetooth device supports the Bluetooth compliant stereo headset function.

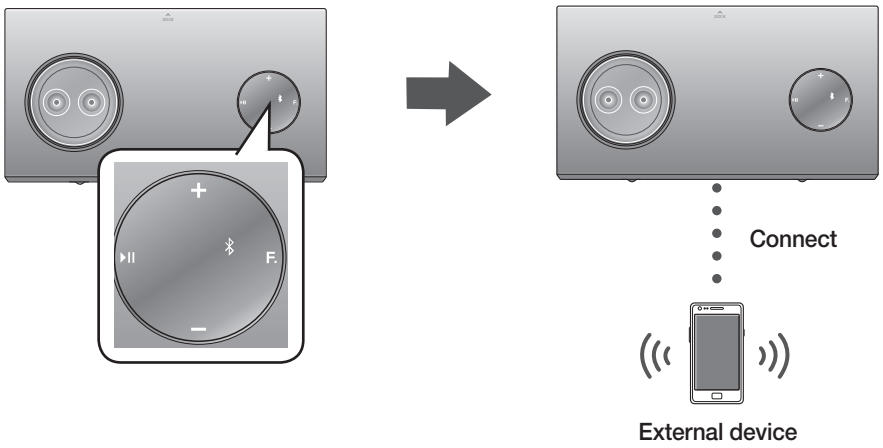

1. Press the **F.** button on the top panel of the Wireless Audio with Dock repeatedly until the ᛒ icon appears in the display.
   - Each time you press the button, the selection changes as follows :
     ▭ → 📱 → ᛒ → ⇠ → ⎚ → ⎙ → **AUX (LED Off)**
   - The selected mode is displayed in white in the Function Display.
2. Select the Bluetooth menu on your Bluetooth device.
   (Refer to the Bluetooth device's user manual for instructions.)
3. Scan or search for All Devices or for Headsets.
   - You will see a list of devices.
4. Select "**[Samsung]W_Audio XXXXXX**" from the searched list.
   - If the Bluetooth device fails to pair with the Wireless Audio with Dock, delete the "[Samsung]W_Audio XXXXXX" found by the Bluetooth device, and search for the Wireless Audio with Dock again, and then repeat Steps 2, 3, and 4.

playing

USING THE TV MODE (SoundShare)

Press the **F.** button to select the mode, and then connect the TV to the Wireless Audio with Dock. (See page 21)

- The unit will play the TV's audio when it is connected to the TV.
- If you change the Wireless Audio with Dock's Bluetooth input source or turn it off, you will hear audio from the TV again.

▪ You can control the volume only with the Wireless Audio with Dock.

USING THE DOCKING MODE WITH SAMSUNG GALAXY AND APPLE DEVICES

Press the **F.** button to select the mode, and then connect the Samsung Galaxy or Apple device to the Dual Dock. (See page 13)

<Samsung Galaxy Devices>

To use your Samsung Galaxy series device with the Dual Dock, you must download and install the Docking Mode application from the Android Market on the device. To download, follow these steps:

1. Tap the Play Store (Android Market) icon on the Samsung Galaxy device's main screen.
2. Tap the search icon on the screen to access the search bar.
3. In the search bar, type in the [**Samsung Wireless Audio Dock**], and then search.
4. In the search result list, find, and then tap [**Samsung Wireless Audio Dock**] to start downloading.
5. Tap [**install**].

To play music, follow these steps:

1-1. If you start the app when the Wireless Audio with Dock is the only device for the Bluetooth connection,
selecting PLAY in your device automatically establishes the Bluetooth connection to the Wireless Audio with Dock and the unit plays music.

1-2. If there are multiple devices for Bluetooth connection including Wireless Audio with Dock,

1) When you start the app, the list of the devices which you can connect to the Wireless Audio with Dock will appear.
2) Play music after connecting to the Wireless Audio with Dock by selecting it on the list of devices.
   - If there exists a Bluetooth device paired to the Wireless Audio with Dock before, it will not appear in the list and be connected automatically.

2. If you replace the Wireless Audio with Dock which you have paired to your mobile device, you should delete the remaining settings saved in your device before pairing to the new one.
   - → [**Clear data**].

- Once you started the application, running is not disturbed by charging your mobile device with an ordinary charger.
- When you connect other device to the Wireless Audio with Dock after connecting Samsung Galaxy device in docking mode, you may have to turn off the Bluetooth mode of the Samsung Galaxy device.
- If you have trouble connecting the Samsung Galaxy device to the Dual Dock, turn off the devices's Bluetooth mode.

<Apple Devices>

1. Select the mode as described above, and then connect the Apple device to the Dual Dock as described in Connecting a Device to the Dual Dock (Page 13). You will hear a ringing sound.

2. Select the <**Music**> menu in the main screen of the Apple device.

3. Select and play the desired music.

- The music will play through the Wireless Audio with Dock's speakers.

- While playing a video with your device, Play/Pause/Next/Back operations may not be available. Use the button on your source device to operate it.

Compatibility list (Apple Device)

Docking mode compatible iPod/iPhone/iPad models
Update the software of your iPod/iPhone/iPad to the latest version before using it with this unit.

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPad 2
- iPad

• Depending on its version of iPod Software, your device may not be compatible or may operate abnormally.

※ If you connect an incompatible Apple device, the iPod Function LED will blink.

USING THE BLUETOOTH MODE

Press the **F.** button to select the ᛒ mode, and then connect the Bluetooth device to the Wireless Audio with Dock. (See page 22)

To connect your Bluetooth device when the Wireless Audio with Dock is in Bluetooth mode, search for the Wireless Audio with Dock on the device's Bluetooth list. Select the Wireless Audio with Dock, and then connect. Once the Wireless Audio with Dock has connected, select and play the desired music.

The music will play through the Wireless Audio with Dock's speakers.

- If you want to change the device which is connected through Bluetooth mode to other device, disconnect the existing device and try to connect to the other device which you want to use.
- While in Bluetooth communication, Play/Pause/Next/Back operations may not be available depending on used mobile device and application.
- Operating Bluetooth device paired to the Wireless Audio with Dock may cause stuttering if operated while the Wireless Audio with Dock is playing back from AUX input.

To disconnect the Bluetooth device from the Wireless Audio With Dock

You can cancel Bluetooth pairing from the Wireless Audio with Dock. For instructions, see the Bluetooth device's user manual.

- The Wireless Audio with Dock will be disconnected.

To disconnect the Wireless Audio with Dock from the Bluetooth device

Press the **F.** button on the top panel of the Wireless Audio with Dock to switch from ᛒ to another mode or press the Power button on the remote to turn the Wireless Audio with Dock off.

- The currently connected device will be disconnected.

- The Bluetooth connection only works when the Bluetooth device is close to the set. The connection is automatically cut off if the Bluetooth device moves out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- If the Bluetooth device comes back into the effective range, you can restart to restore the pairing with the Bluetooth device.

USING THE USB MODE

1. Connect the USB device to the USB port on the back of the unit.

2. Press the **F.** button on the top panel of the Wireless Audio with Dock repeatedly until the ⇜ icon appears in the display.

- Each time you press the button, the selection changes as follows :
  ▭ → 📱 → ᛒ → ⇜ → ⍓ → ⍓ → **AUX (LED Off)**
- The selected mode is displayed in white in the Function Display.

Before you connect a USB device

Read the list below to check compatibility.

- This product may not be compatible with certain types of USB storage media.
- The FAT16 and FAT32 file systems are supported.
  - The NTFS file system is not supported.
- Connect a USB device directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.
- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.
- Digital camera PTP protocols are not supported.
- Do not remove the USB device while it is being read.
- DRM-protected music files (MP3, WMA) from a commercial web site can not be played.
- External HDDs are not supported.
- Compatibility list

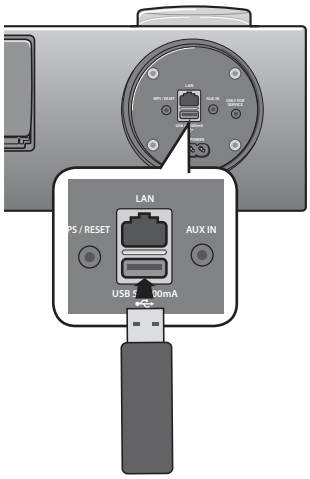

Format	Music	
File name	MP3	WMA
File extension	.MP3	.WMA
Bit rate	80~320 kbps	56~128 kbps
Version	-	V8
Sampling Frequency	44.1KHz	44.1KHz

※ Do not connect your mobile device to the USB port and the Docking station at the same time for recharging.

USING AIRPLAY AND ALLSHARE PLAY MODE

To use the or function, the Wireless Audio with Dock and the device which you are trying to connect must be connected to the same AP.

<AirPlay mode_ >

1. Play the desired music in the <**Music**> menu on main screen of the Apple device.

2. Select "**Samsung W_Audio E750 XXXXXXX**" by pressing the icon on the screen of the Apple device.

- The music will play through the Wireless Audio with Dock's speakers.

※ When you succeed the connection between iTunes and the Wireless Audio with Dock through same IP once, the mode will be switched automatically to AirPlay mode when you select the Wireless Audio with Dock and play musics in iTunes in a mode other than the AirPlay mode.

▪ It takes 3~5 seconds to respond for the set from your remote control operation.

<AllShare Play mode_ >

1. Select the AllShare menu on the main screen of the Galaxy device.

2. After going into [**Audio**] in AllShare Play, select the desired music.

3. When the <**Select device**> pop-up appears, select "**Samsung W_Audio E750 XXXXXXX**".

- The music will play through the Wireless Audio with Dock's speakers.

▪ The control function may not be supported by your device depending on the functions of the application and the Audio Dock of your device.

BASIC FUNCTIONS

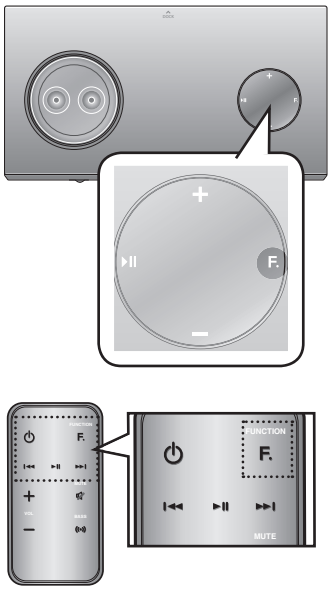

Using the input mode

You can select the following inputs: → → → → → → → **AUX (LED Off)**.

Press an appropriate button on the remote control to select a desired mode, or press **F.** to select from: → → → → → → → **AUX (LED Off)**.

Input mode	Display
TV mode	
Docking mode	
BLUETOOTH mode	
USB mode	
AirPlay mode	
AllShare Play mode	
AUX input	LED Off

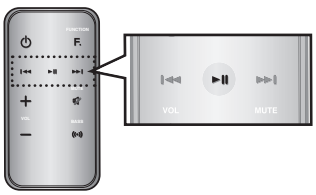

Play/Pause

During playback, press the ▶II button.

- Press the ▶II button to stop playing the file temporarily. Press the ▶II button again to play the selected file.

▪ This function may not operate in certain mode.

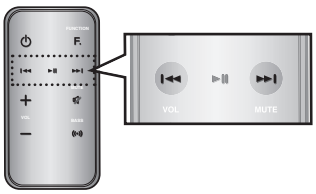

Skip Forward/Back

During playback, press the I◀◀,▶▶I button.

- When there is more than one file and you press the ▶▶I button, the next file is selected.
- When there is more than one file and you press the I◀◀ button, the previous file is selected.

▪ This function may not operate in certain mode.

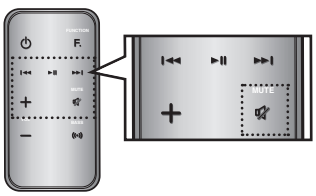

Muting the sound

This is useful when answering a doorbell or telephone call.

1. To mute sound of this unit, press the **MUTE** ( ) button of the remote control.

2. Press **MUTE** ( ) on the remote control again (or press **VOLUME +/-**) to restore the sound.

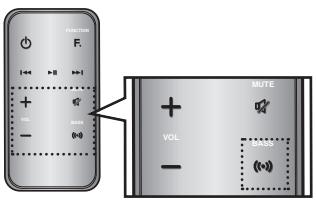

Using the BASS function

Lets you optimise the bass sound according to your tastes.

Press **BASS** on the remote control of this unit.

- Each time you press the button, the selection changes as follows : BASS ON ➞ OFF

SOFTWARE UPGRADE (ONLY USB MODE)

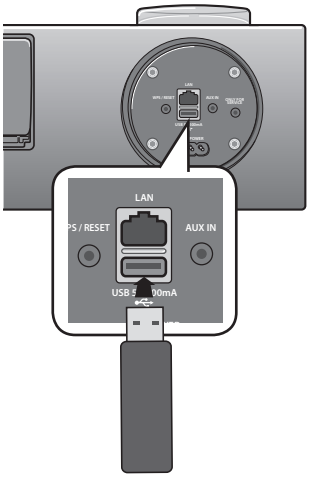

1. Visit www.samsung.com.
2. Click **SUPPORT** on the top right of the page.
3. Enter the product's model number into the search field, and then click **Find Product**.
4. Click **Get downloads** in the Center of the page below the Downloads header.
5. Click **Firmware** in the Center of the page.
6. Click **ZIP** file icon of the upgrade file.
7. Once popup window appears, click **OK** and continue to download and save upgrade file onto your PC.
8. Uncompress downloaded .zip file into a certain folder of your PC.
9. Copy all files in the folder to the USB flash drive's root directory.
   - Upgrading allows only one file set for upgrading at a time.
10. Press the **F.** button on the top panel of the Wireless Audio with Dock repeatedly until the ⇜ icon appears in the display. Insert the USB drive into the USB port on the back panel of the unit.
11. The LED will blink during the Software update process. The product will turn off automatically after completing the firmware upgrade.
    - It may take longer depending on the functions to upgrade. (Maximum 10 minutes)
    - Turn on the product again.

- Do not disconnect the power or remove the USB drive while an upgrade is being applied. The main unit will turn off automatically after completing the firmware upgrade.
- When software is upgraded, settings you have made will return to their default (factory) settings. We recommend you write down your settings so that you can easily reset them after the upgrade.
- If the firmware fails to upgrade, we recommend formatting the USB drive in the FAT16 format and then trying again.
- For upgrading purposes, do not format the USB drive in NTFS format. It is not a supported file system.
- Depending on the manufacturer, the USB may not be supported.
- Disconnect the Wireless Audio with Dock from the Internet and any external devices before you upgrade the software.
- You cannot charge other external devices through this USB port.
- Refer to the Upgrade Guide from the website.

troubleshooting

Before requesting service, please check the following.

Symptom	Check	Remedy
The unit will not turn on.	• Is the power cord plugged into the outlet?	• Connect the power plug to the outlet.
A function does not work when the button is pressed.	• Has the Wireless Audio with Dock or the remote been exposed to static electricity?	• Disconnect the power plug and connect it again.
Sound is not produced.	• Is the unit properly connected to device? • Is the Mute function on? • Is the volume set to minimum?	• Connect it correctly. • Press the Mute button to cancel the function. • Adjust the volume.
The remote control does not work.	• Are the batteries drained? • Is the distance between remote control and main unit too far?	• Replace with new batteries. • Operate closer to the main unit.
Wi-Fi network connection failed	• Check if your Wi-Fi router is Wi-Fi certified.	• Make sure the Network Connection is set to Wireless (General). • Make sure the Wireless Audio with Dock unit is connected to a wireless IP router or modem.
The SoundShare (TV pairing) failed.	• Is your TV a supporting model? • Is your TV firmware the latest version? • Does an error occur in connection?	• Check whether your TV is a supporting model or not. (http://www.samsung.com) • Update your TV with the latest firmware. • Reset the unit. Press the WPS/RESET button in the TV mode. • Contact the call centre.

appendix

SPECIFICATIONS

Model name	DA-E750/ DA-E751		
GENERAL	Weight		9 kg
	Dimensions (W x D x H)		450 x 244.1 x 168.5 mm
	Operating temperature range		+5°C~+35°C
	Operating humidity range		10 % to 75 %
AMPLIFIER	Rated output power	Front L/R	20W/4OHM, THD = 1%, 1kHz
		Subwoofer	60W/8OHM, THD=1%, 70Hz
	Input sensitivity/Impedance		400mV/56Kohm (AUX)
	S/N ratio (analog input)		65 dB
	Separation(1kHz)		65 dB
FREQUENCY RESPONSE	Analog input		20Hz~20kHz(±3 dB)
	Digital input/48kHz PCM		20Hz~20kHz(±3 dB)
DOCKING RATING	iPad		5 V 2.0 A
	iPod		5 V 1.0 A
	Galaxy		5 V 1.0 A
USB	Type A		USB 1.1
	DC output		500mA
NETWORK	Ethernet		100BASE-TX Terminal
	Wireless LAN		Built-in
	Security		WEP (OPEN) WPA-PSK (TKIP) WPA2-PSK (AES)
	WPS(PBC/PIN)		Supported

* S/N ratio, distortion, separation, and usable sensitivity are based on measurement using AES (Audio Engineering Society) guidelines.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- Network speeds equal to or below 10Mbps are not supported.
- For the power supply and Power Consumption, refer to the label attached to the product.

Open Source Announcement

To send inquiries and requests for questions regarding open sources, contact Samsung via Email (oss.request@samsung.com).

- This product uses some software programs which are distributed under the Independent JPEG Group.

FLAC decoder, Copyright (C) 2001,2002,2003,2004,2005,2006,2007 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.“

Ogg/Vorbis decoder, Copyright (c) 2002, Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) for PLDT 1-800-3-SAMSUNG(726-7864) for Digitel 1-800-8-SAMSUNG(726-7864) for Globe 02-5805777	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
THAILAND	1800-29-3232 02-689-3232	www.samsung.com
TAIWAN	0800-329-999 0266-026-066	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com
▪ Middle East		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
OMAN	800-SAMSUNG(726-7864)	www.samsung.com
KUWAIT	183-2255	www.samsung.com
BAHRAIN	8000-4726	www.samsung.com
Egypt	08000-726786	www.samsung.com
JORDAN	800-22273	www.samsung.com
IRAN	021-8255	www.samsung.com
Morocco	080 100 2255	www.samsung.com
Saudi Arabia	9200-21230	www.samsung.com
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com
Ghana	0800-10077 0302-200077	www.samsung.com
Cote D' Ivoire	8000 0077	www.samsung.com
Senegal	800-00-0077	www.samsung.com
Cameroon	7095- 0077	www.samsung.com
KENYA	0800 724 000	www.samsung.com
UGANDA	0800 300 300	www.samsung.com
TANZANIA	0685 88 99 00	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com

DA-E750
DA-E751

Wireless Audio With Dock
(מערכת שמע אלחוטית עם תחנת עגינה)
מדריך למשתמש

דמיינו את האפשרויות

תודה שרכשתם מוצר זה מתוצרת Samsung.
לקבלת שירות מלא יותר, רשמו את המכשיר שברשותכם באתר

www.samsung.com/register

SAMSUNG

מאפיינים

AllShare Play
הפעלת מוזיקה השמורה בהתקנים השונים שברשותכם (כגון מחשב, טלפון חכם או התקן אחסון ברשת) באמצעות מערכת השמע האלחוטית בעלת תחנת העגינה, דרך חיבור רשת.

AirPlay
הפעלת מוזיקה השמורה על-גבי התקני Apple שברשותכם במערכת השמע האלחוטית בעלת תחנת העגינה.

מערכת רמקולים עם תחנת עגינה לשני נגנים
במערכת השמע בעלת תחנת העגינה לשני נגנים תוכלו למקם את הנגנים, להטעין אותם ולהשמיע באמצעות הרמקולים הבנויים מוזיקה מהתקן Samsung Galaxy או התקן Apple.

תמיכה בחיבור USB
כדי להשמיע מוזיקה מתוך התקני אחסון USB חיצוניים כגון נגני MP3, זיכרון הבזק USB וכו', חברו אותם אל המכשיר והשתמשו בפונקציית ה-USB HOST של מערכת השמע האחוטית בעלת תחנת העגינה.

פונקציית Bluetooth
חברו התקן USB אל מערכת השמע האלחוטית בעלת תחנת העגינה ותוכלו ליהנות ממוזיקה המושמעת בסטריאו באיכות גבוהה, באופן אלחוטי בלבד!

aptX®
aptX מאפשר שמע סטריאו באיכות גבוהה ב-Bluetooth, על -ידי שידור איכות שמע קווית באמצעות חיבור אלחוטי.

רישיון

Made for iPod iPhone iPad

AirPlay

AirPlay, הסמל של AirPlay, iPhone, iPod, iPod classic, iPod nano, iPod shuffle, ו-iPod touch הם סימנים מסחריים של Apple Inc., הרשומים בארצות הברית ובארצות אחרות. iPad הוא סימן מסחרי של Apple Inc.

מידע אודות בטיחות

הוראות בטיחות

לצמצום הסיכון להתחשמלות, אין להוריד את המכסה (או הדופן האחורית).
המכשיר אינו כולל חלקים שניתנים לתיקון על-ידי המשתמש. לתיקון ושירות, פנו לטכנאי שירות מוסמך.

סמל זה מציין "מתח מסוכן" שקיים בתוך המכשיר ועלול לגרום להתחשמלות או לפציעה.

סמל זה מציין הוראות חשובות הנלוות למכשיר.

אזהרה : לצמצום הסיכון לשריפה או להתחשמלות, אין לחשוף מכשיר זה לגשם או ללחות.

זהירות : למניעת התחשמלות, יש להתאים את הקצה הרחב של התקע אל השקע הרחב ולהכניסו עד הסוף.
• יש לוודא כי מכשיר זה מחובר תמיד לשקע זרם חליפין עם הגנת חיבור הארקה.
• כדי לנתק את המכשיר מהחשמל, יש לשלוף את התקע משקע החשמל, לכן על שקע החשמל להיות זמין לשימוש בכל עת.

זהירות
• אין לחשוף את המכשיר לטפטוף או להתזה של נוזלים. אין להניח על המכשיר כלים מלאים בנוזלים, כגון אגרטלים.
• לכיבוי מוחלט של המכשיר, עליכם להוציא את התקע שלו משקע החשמל. לכן, על התקע להיות זמין ונגיש בכל זמן.

אמצעי זהירות

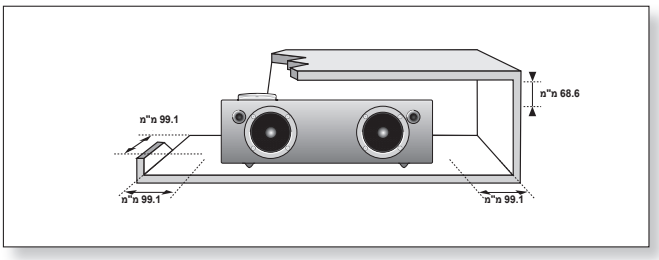

ודאו כי אספקת זרם החילופין בביתכם תואמת לדרישות המתח המצויינות באחורי המכשיר. התקינו את המכשיר בצורה אופקית על בסיס מתאים (כגון רהיט יציב), כשיש מספיק רווח סביבו לאוורר (70~100 מ"מ).
יש לוודא כי פתחי האוורור אינם חסומים. אין להניח את המכשיר על גבי מגברים או מוצרים אחרים שעשויים להתחמם. מכשיר זה מיועד לשימוש ממושך. כדי לכבות את המכשיר לחלוטין, נתקו את כבל החשמל מתקע החשמל. נתקו את המכשיר מהחשמל אם אתם מתכוונים לא להשתמש בו למשך תקופה ארוכה.

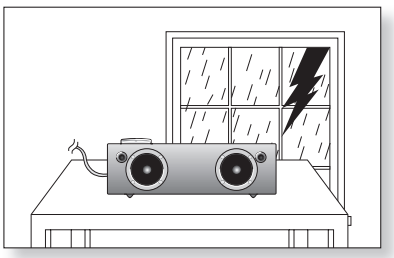

יש להוציא את תקע זרם החילופין מהשקע. קפיצות מתח כתוצאה מברקים עלולות לגרום נזק למכשיר.

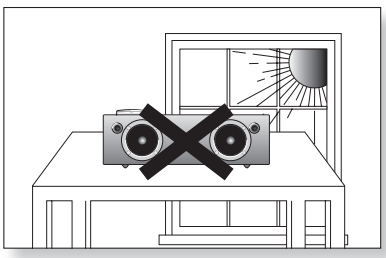

אין לחשוף את המכשיר באופן ישיר לאור יום או למקורות חום אחרים. הוא עלול להתחמם יתר על המידה ולהינזק.

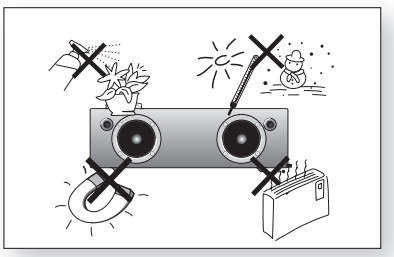

הגנו על המכשיר מפני נוזלים (למשל, אל תקרבו אליו אגרטלים), חום גבוה (מאח בוערת, למשל) או ציוד היוצר שדה מגנטי או חשמלי חזק. נתקו את כבל החשמל משקע החשמל אם המכשיר ניזוק.

המכשיר שלכם לא נועד לשימוש תעשייתי. הוא נועד לשימוש אישי בלבד.

עיבוי עלול להיווצר במידה והמכשיר אוחסן בטמפרטורה נמוכה.

אם מובילים את המכשיר בחורף, יש להמתין כשעתיים עד שטמפרטורת המכשיר תגיעה לטמפרטורת החדר לפני השימוש.

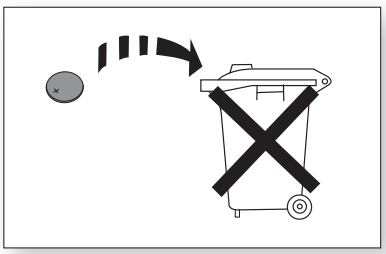

הסוללות המשמשות במכשיר זה מכילות כימיקלים מזיקים לסביבה.
אין להשליכן יחד עם האשפה הביתית.

HEB

תוכן עניינים

מאפיינים 2
2 מאפיינים
2 רישיון

מידע אודות בטיחות 3
3 הוראות בטיחות
4 אמצעי זהירות

התחלה 6
6 לפני העיון במדריך למשתמש
6 מה כולל המכשיר

תיאור 7
7 לוח עליון/קדמי/אחורי

שלט רחוק 9
9 סקירת השלט רחוק

הפעלה ושליטה בעוצמת הקול 10
10 הפעלת המכשיר וכיבויו
10 התאמת עוצמת הקול

חיבורים 11
11 התקנת ליבת הפריט הטבעתית על כבל החשמל
12 שימוש במחיצת המגן
13 חיבור התקן אל תחנת העגינה הכפולה
14 חיבור התקן שמע באמצעות כניסת AUX IN
15 חיבור לרשת
21 חיבור להתקני Bluetooth

השמעה 23
23 שימוש במצב TV (SoundShare)
23 שימוש במצב העגינה עם התקני Samsung Galaxy ו-Apple
25 שימוש במצב Bluetooth
26 שימוש במצב USB
27 הפעלת מצב Airplay ו-Allshare Play

פונקציות 28
28 פונקציות מתקדמות
29 פונקציות מתקדמות
30 שדרוג תוכנה (במצב USB בלבד)

פתרון בעיות 31
31 פתרון בעיות

נספח 32
32 מפרטים

התחלה

לפני העיון במדריך למשתמש

קראו את המושגים שלהלן לפני קריאת המדריך למשתמש.

סמלים הנמצאים בשימוש במדריך

סמל	מונח	הגדרה
	זהירות	מציין מקרים שבהם הפונקציה אינה פועלת או שההגדרות בוטלו.
	הערה	מציין המלצות או הוראות בעמוד שעוזרות לתפעול פונקציה.

הוראות בטיחות ופתרון בעיות

1) קראו את הוראות הבטיחות בעיון לפני שתשתמשו במכשיר. (ראו עמוד 3).
2) אם נתקלתם בבעיה, עיינו בסעיף 'פתרון בעיות'. (ראו עמוד 31).

זכויות יוצרים

© Samsung Electronics Co.,Ltd. 2012

כל הזכויות שמורות. אין לשכפל או להעתיק מדריך זה או חלק ממנו ללא הרשאה בכתב מראש מחברת Samsung Electronics Co.,Ltd.

מה כולל המכשיר

בדקו אם האביזרים שלהלן מצורפים למכשיר.

			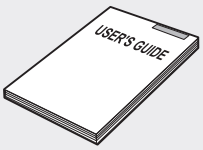
שלט רחוק / סוללת ליתיום (3V)	**כבל חשמל**	**כבל שמע**	**מדריך למשתמש**
 (גדול) (עבור כבל חשמל 1EA)			
ליבר פריט טורואידית	**מחיצת מגן/כיסוי מגן**	**מטלית**	

▪ עיצוב האביזרים עשוי להיות שונה מהאביזרים המוצגים באיורים שלעיל.

תיאור

לוח עליון/קדמי/אחורי

<עליון>

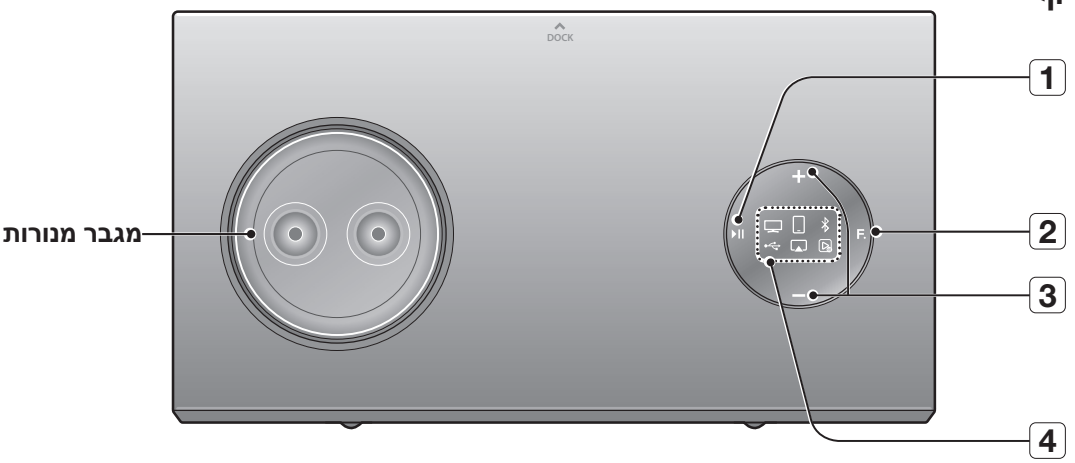

<קדמי>

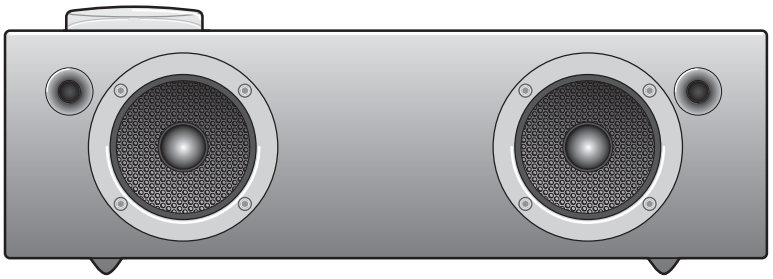

<אחורי>

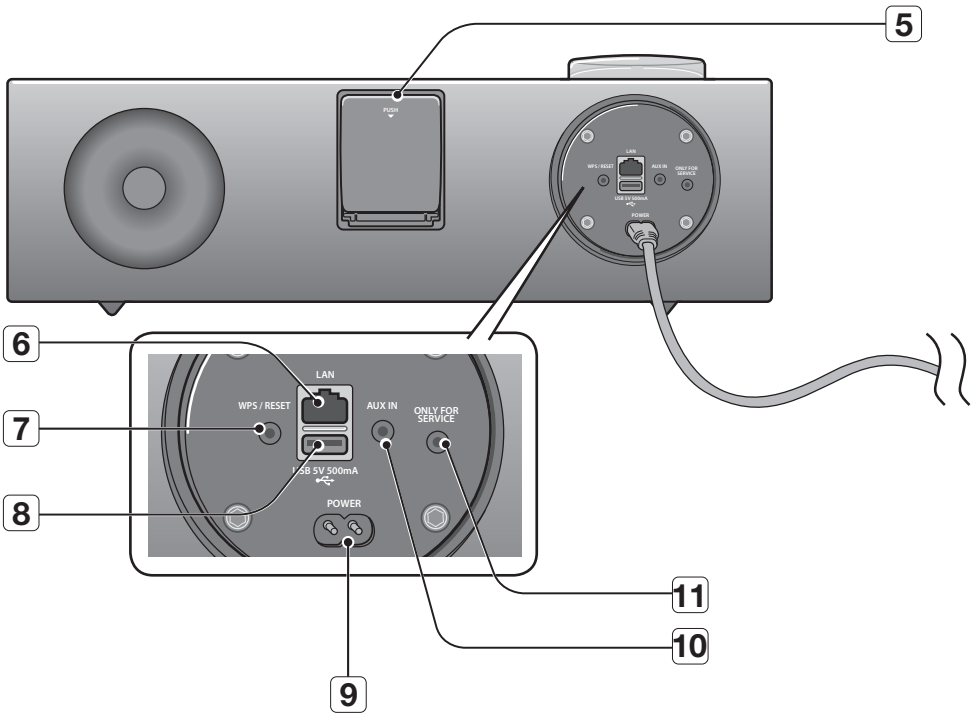

1	**לחצן PLAY/PAUSE (הפעלה/השהיה)**	השמעת קובץ מוזיקה או השהיית ההשמעה.
2	**לחצן FUNCTION (פונקציה)**	מעבר בין המצבים על פי הסדר הבא: **AUX (נורית ה-LED כבויה) ← ← ← ← ← ←**
3	**לחצני VOLUME +/- (עוצמת קול)**	כוונון עוצמת הקול.
4	**תצוגת פונקציות**	בעת שינוי המצבים באמצעות לחצן Function (פונקציות), סמל המצב הנבחר מסומן בלבן בתצוגת הפונקציות. נורית החיווי מהמבהבת בעת הפעלת היחידה ומפסיקה להבהב כאשר היחידה פועלת ומוכנה להפעלת קבצים.
5	**DUAL DOCK (תחנת עגינה לשני נגנים)**	תחנת עגינה בעלת 5 פינים עבור התקן Samsung Galaxy או תחנת עגינה בעלת 30 פינים עבור התקן Apple.
6	**חיבור LAN**	מאפשר לכם להתחבר אל הרשת באמצעות כבל LAN.
7	**לחצן WPS/RESET**	משמש לחיבור היחידה אל הרשת האלחוטית.
8	**יציאת USB**	חיבור התקן אחסון USB חיצוני, כגון נגן MP3, להשמעת הקבצים השמורים בהתקן.
9	**חיבור לחשמל**	חברו את כבל החשמל למכשיר זה.
10	**AUX IN**	חיבור אל היציאה האנלוגית של התקן חיצוני.
11	**ONLY FOR SERVICE (לשירות בלבד)**	שקע זה מיועד לשירות בלבד.

- בעת הפעלת היחידה, יידרשו לה כ-20 שניות לחמם את שפופרת הוואקום כדי להפיק צליל יציב.
- לעדכון התוכנה של המוצר באמצעות חיבור USB, יש להשתמש בהתקן זיכרון מסוג USB.

- יש להיזהר בעת אחיזה במוצר או הזזתו מכיוון שהוופר ממוקם בתחתית המוצר.
- ניתן לחבר יחידה זו להתקנים ניידים בעלי רמות פלט שמע גבוהות. בעת חיבור היחידה להתקנים חיצוניים בעלי רמות פלט גבוהות, עוצמת פלט השמע עשויה להיות מונמכת על מנת להגן על המגבר והרמקולים.
- בעת ניתוק כבל החשמל מהשקע, אחזו בתקע עצמו.
  אין למשוך את הכבל כדי לנתקו.
- אם תניחו מכשירים אלקטרוניים אחרים מעל היחידה, ייתכן שהשמע המופק מהיחידה יהיה מעוות.
- אין לאפשר לילדים לגעת בפני המכשיר כאשר הוא פועל. המכשיר מתחמם.

שלט רחוק

סקירת השלט רחוק

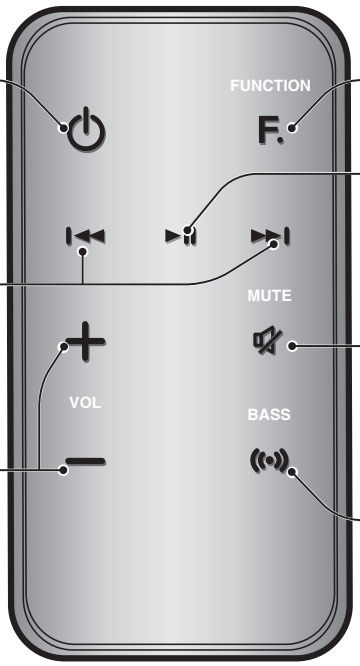

לחצן POWER (הפעלה)
להפעלה וכיבוי של המכשיר.

לחצן FUNCTION (פונקציות)
בחירת מצב הפונקציה.

לחצן PLAY/PAUSE (הפעלה/השהיה)
השמעת קובץ מוזיקה או השהיית ההשמעה.

לחצני בקרה
מעבר אל קובץ המוזיקה הבא או הקודם.

לחצן MUTE (השתקה)
להשתקת הקול שמפיקה היחידה. לחצו שנית כדי לחזור אל עוצמת הקול הקודמת שהושמעה.

לחצני VOLUME (עוצמת קול)
ויסות עוצמת הקול של המכשיר.

לחצן BASS (בס)
הפקת צלילים מיטבית בהתאם להעדפותיכם.

התקנת סוללות בשלט רחוק

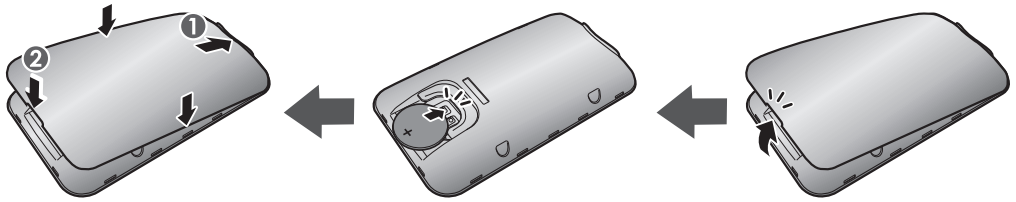

1. פתחו את מכסה השלט רחוק על-ידי הכנסת הציפורן ברווח שבין כיסוי השלט רחוק לבין גוף השלט רחוק. לאחר מכן הרימו את המכסה והסירו אותו לגמרי.
2. הכניסו סוללת ליתיום 3V. הכניסו את הסוללה אל תוך התא כאשר הסימון + פונה כלפי מעלה.
3. חברו את כיסוי השלט רחוק אל השלט. הכניסו את צדו העליון קודם והורידו את המכסה כך שהוא מכסה את גוף השלט, לחצו את המכסה לכוון הגוף על-ידי לחיצה על הקצוות באמצעות היד.

▪ היזהרו שהציפורן שלכם לא תיתפס ברווח בעת הרמת המכסה. היא עלולה להיפגע.

טווח ההפעלה של השלט רחוק

ניתן להשתמש בשלט רחוק במרחק של עד 7 מטרים בקו ישר מהמכשיר. כמו כן ניתן להשתמש בשלט רחוק בזווית אופקית של עד 30° מחיישן השלט רחוק.

הפעלה ושליטה בעוצמת הקול

הפעלת המכשיר וכיבויו

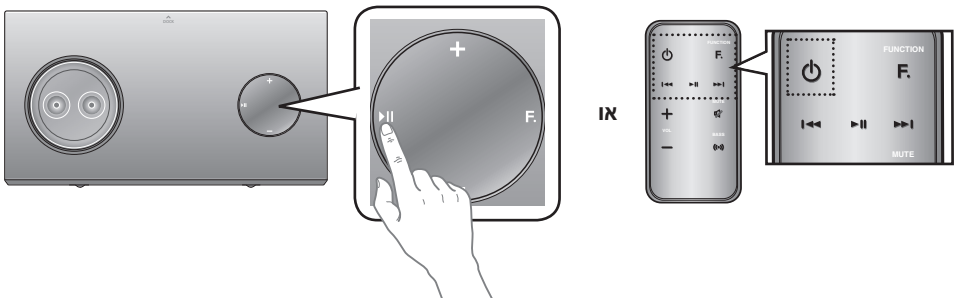

1. להפעלת היחידה, געו בכל לחצן בלוח הקדמי של היחידה כאשר היחידה נמצאת במצב המתנה.

או

לחצו על הלחצן **POWER (הפעלה/כיבוי)** בשלט רחוק.

2. לכיבוי היחידה, געו בלחצן ►II בלוח הקדמי של היחידה במשך יותר מ-3 שניות.

או

לחצו שוב על הלחצן **POWER (הפעלה/כיבוי)** בשלט רחוק.

▪ **עקב זמן החימום המקדים של המגבר, הפעלת המכשיר עשויה להימשך כ-20 שניות.**

התאמת עוצמת הקול

השתמשו בלחצני +, - כדי לכוון את עוצמת השמע. נוריות החיווי נדלקות אחת-אחת משמאל לימין בעת הגברת עוצמת הקול ומימין לשמאל בעת הנמכת עוצמת הקול. נורת ה-LED לא תאיר אם תגבירו את עוצמת השמע כאשר הוגדרה העוצמה המירבית, או תנמיכו את עוצמת השמע כאשר הוגדרה העוצמה הנמוכה ביותר.

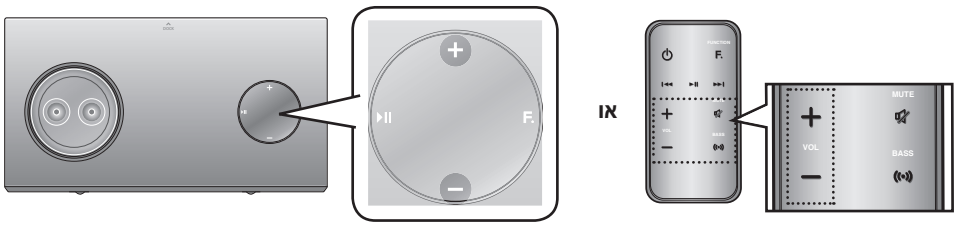

לחצו על לחצן **+/–** (עוצמת קול) שבצד ימין של הלוח העליון.

או

לחצו על הלחצן **VOL +/– (עוצמת קול)** בשלט רחוק.

▪ עוצמת הקול תגבר או תקטן כאשר תלחצו על הלחצנים VOL +/– (עוצמת קול).

▪ כמו כן ניתן להשתמש בלחצני עוצמת הקול של ההתקנים המחוברים למכשיר לשליטה בעוצמת הקול באמצעות תחנת העגינה לשני נגנים או Bluetooth. ייתכן שהאפשרות לשליטה בעוצמת הקול של התקנים המחוברים למכשיר באמצעות Bluetooth תהיה מצומצמת.

חיבורים

התקנת ליבת הפריט הטבעתית על כבל החשמל

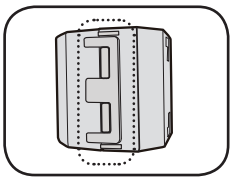

הרימו את המנעול ופתחו את הליבה.

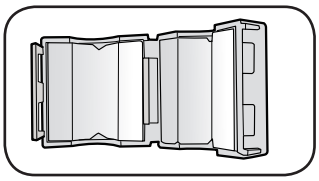

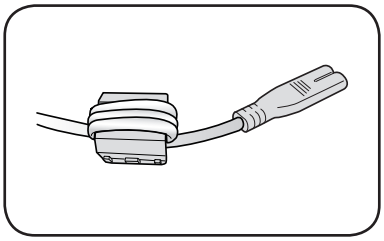

סגרו חזרה את המנעול.

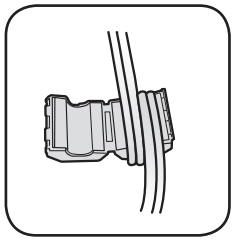

לפפו את כבל החשמל 3 פעמים מסביב לליבה.
(התחילו ללפף 5 עד 10 ס"מ מהתקע)

וגמה תציחמב שומיש

אם ברצונכם לחבר את מכשיר ה-Samsung Galaxy או ה-Apple שלכם לתחנת העגינה הכפולה ללא כיסוי מגן, חברו את מחיצת הכיסוי.

- השתמשו בו להתקנה יציבה של ההתקן שברשותכם בהתאם לצורת ההתקן.

אל תחנת העגינה הכפולה מצורף גם כיסוי מגן למחבר התקן Apple בעל 30 פינים. השתמשו בכיסוי המגן עבור מחבר בעל 30 פינים בעת חיבור של התקן Samsun Galaxy בעל 5 פינים.

ראו איורים להלן למידע נוסף.

<Galaxy למשתמשים בהתקני>	<Apple למשתמשים בהתקני>
ליתר יציבות בעת חיבור התקן לתחנת העגינה, יש להשתמש בתמיכה מתאימה בהתאם לכיסוי המגן של ההתקן המחובר או צורתו של ההתקן.	
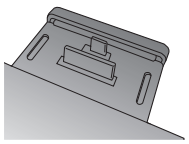	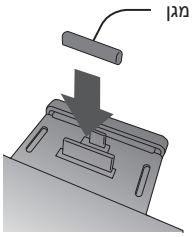
לשימוש בחיבור התקנים ללא כיסוי מגן אל תחנת העגינה.	
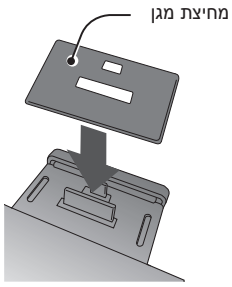	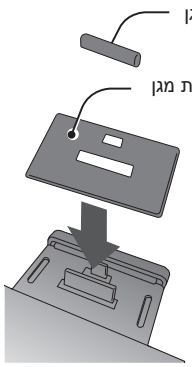

▪ לא ניתן לחבר התקן אל תחנת ההגנה הכפולה אם כיסוי המגן עבה מ-1.5 מ"מ או שלכיסוי תחתית מעוגלת.

חיבור התקן אל תחנת העגינה הכפולה

כיצד לחבר התקן אל תחנת העגינה לשני נגנים.

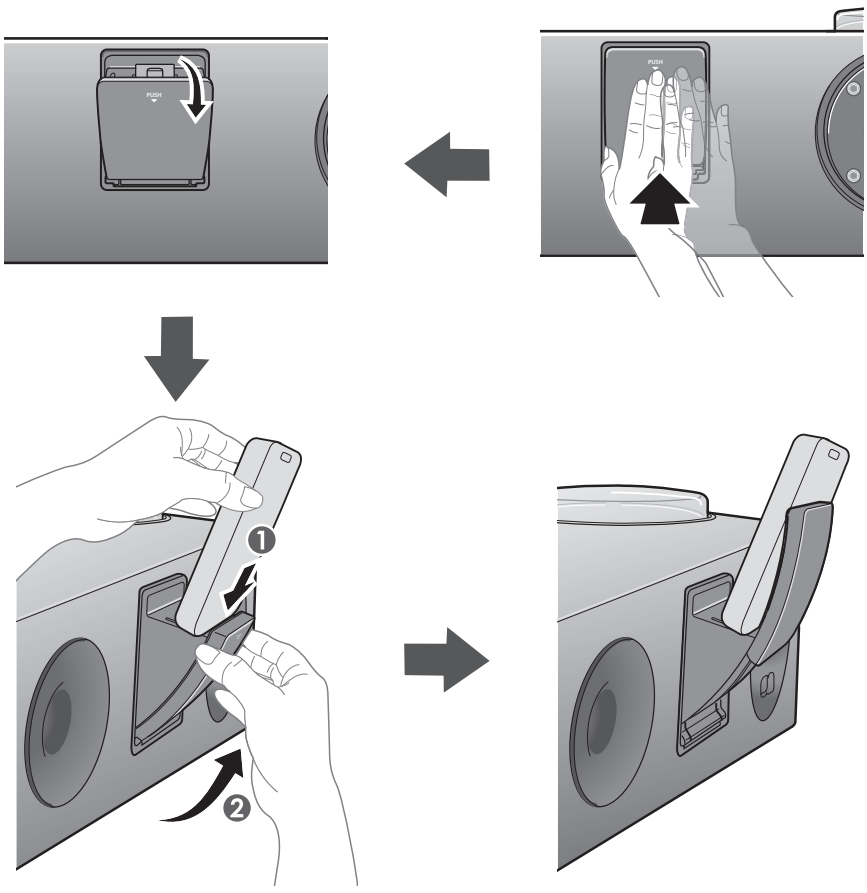

1. תא העגינה **DUAL DOCK** ממוקם בצדו האחורי של המכשיר. לחצו עליו בעדינות כדי לפתוח.

2. לחצו שוב ושוב על הלחצן **F** שבלוח העליון של מערכת השמע האלחוטית בעלת תחנת העגינה עד שהסמל יופיע בתצוגה.

- בכל לחיצה על הלחצן, הבחירה משתנה באופן הבא:
  AUX (נורית ה-LED כבויה)
- המצב שנבחר מסומן בלבן בתצוגת Function (פונקציה).

3. אם ברשותכם התקן מסוג Samsung Galaxy, חברו את ההתקן אל המחבר בעל 5 הפינים (הקטן יותר) לחיבור אל תחנת העגינה הכפולה. אם ברשותכם התקן מסוג Apple, חברו את ההתקן אל המחבר בעל 30 הפינים (הגדול יותר) שבתחנת העגינה לשני נגנים.

4. הרימו את תומך ההתקן כפי שמודגם באיור שלעיל כדי למנוע החלקה או נפילה של ההתקן מתחנת העגינה לשני נגנים.

- הפעילו את התקן Samsung Galaxy שברשותכם לפני שתחברו אותו אל תחנת העגינה הכפולה.
- מכשיר זה אינו תומך בעגינה של התקן Samsung Galaxy והתקן Apple בו-זמנית.
- חברו את התקן ה-Samsung Galaxy ואת התקן ה-Apple אל תחנת העגינה לפני הפעלת מצב העגינה. (ראו עמוד 23)

חיבור התקן שמע באמצעות כניסת AUX IN

בסעיף זה יוסבר כיצד לחבר את המכשיר להתקן שמע.

מכשיר זה מצויד בשקע אנלוגי אחד המיועד לחיבור התקן שמע.

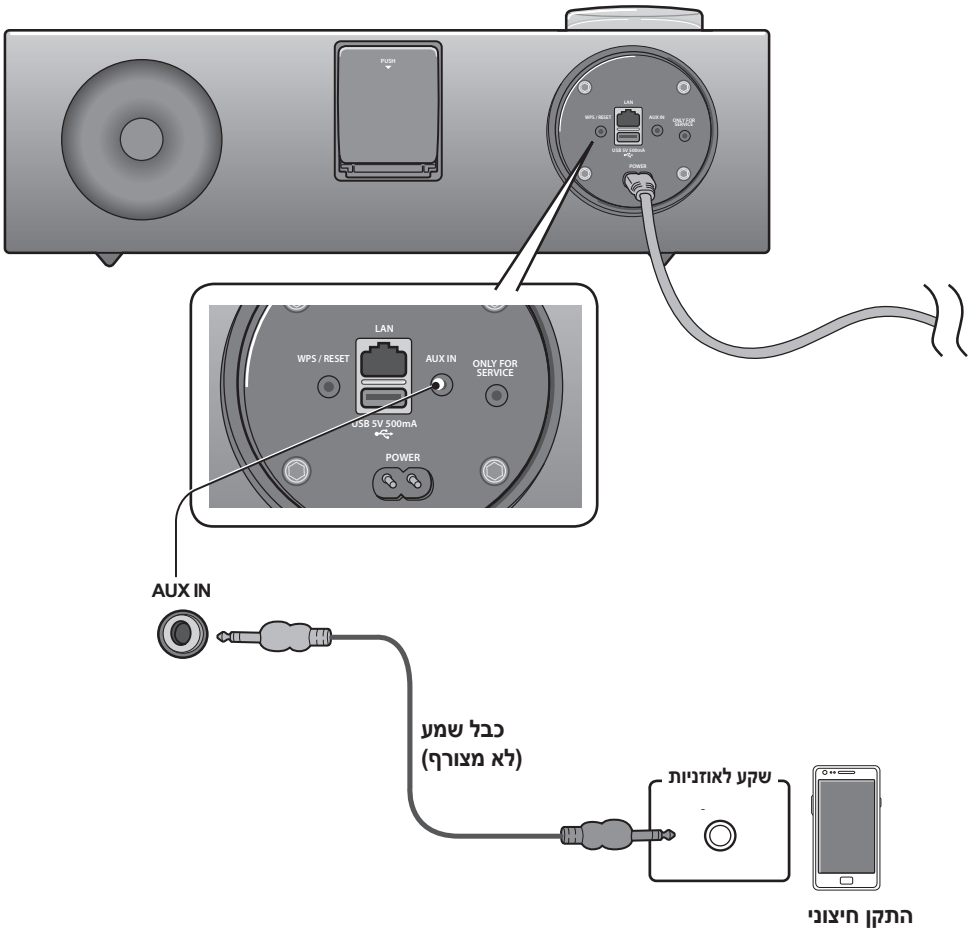

AUX IN

1. חברו את כניסת ה-AUX IN (שמע) מהמכשיר הראשי אל שקע האוזניות שבהתקן החיצוני או בהתקן השמע.

2. לחצו שוב ושוב על הלחצן **F** עד שנוריות חיווי הפונקציות נכבות.

- מצב AX פעיל כאשר לא מאירה כל נורית מחוון פונקציה.

▪ לפני העברה או התקנה של המכשיר, הקפידו לכבות אותו ולנתק אותו מהחשמל.

חיבור לרשת

באפשרותכם לחבר את מערכת השמע האלחוטית בעלת תחנת העגינה אל נתב הרשת שלכם באמצעות אחת מהשיטות שבעמודים הבא.

לחיבור מערכת השמע האלחוטית בעלת תחנת העגינה אל רשת קווית

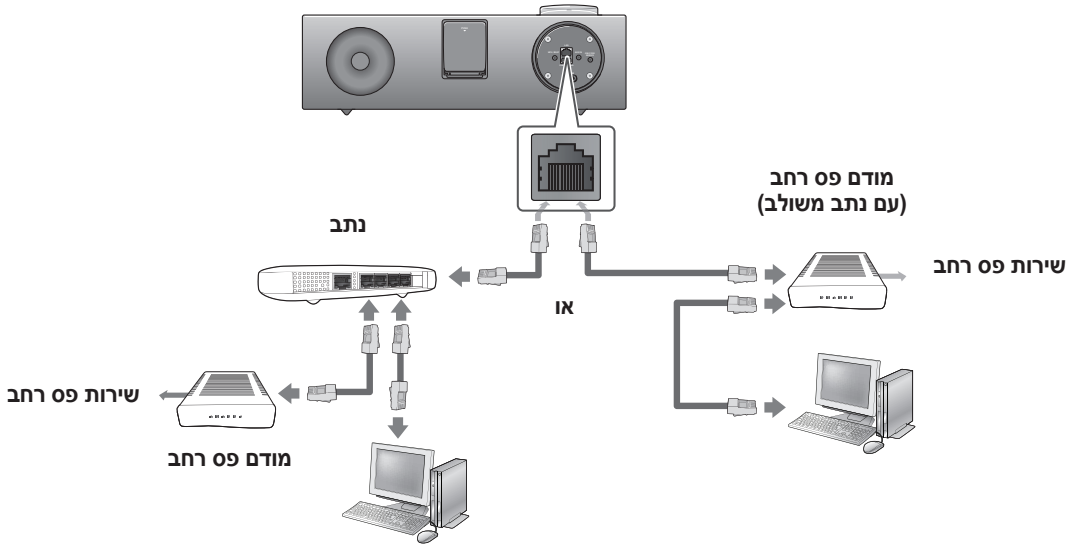

יש לכבות את מערכת השמע האלחוטית בעלת תחנת העגינה לפני חיבור כבל ה-LAN.

1. כבו את מערכת השמע האלחוטית בעלת תחנת העגינה.

2. חברו את מערכת השמע האלחוטית בעלת תחנת העגינה אל הנתב באמצעות כבל LAN.

3. הפעילו את מערכת השמע האלחוטית בעלת תחנת העגינה.

4. לחצו שוב ושוב על הלחצן **F** שבלוח העליון של מערכת השמע האלחוטית בעלת תחנת העגינה עד שהסמל או יופיע בתצוגה.

- בכל לחיצה על הלחצן, הבחירה משתנה באופן הבא:
  ← ← ← ← ← **AUX** ← **(נורית ה-LED כבויה)**

5. המחוון או נדלק באדום, והוא משנה את צבעו ללבן רציף ברגע שמערכת השמע האלחוטית בעלת תחנת העגינה מתחברת אל הנתב.

- אם חיברתם את כבל ה-LAN כאשר המכשיר פועל, כבו והפעילו אותו שנית.
- אם החיבור לרשת לא הצליח, נתקו את כבל ה-LAN וחברו אותו שנית. לאחר מכן אתחלו את המכשיר.
- xעל משתמשי DSL להשתמש בנתב כדי ליצור חיבור רשת.

לחיבור מערכת השמע האלחוטית בעלת תחנת העגינה אל רשת אלחוטית

סעיף זה מפרט ארבע שיטות לחיבור מערכת השמע האלחוטית בעלת תחנת העגינה אל הרשת האלחוטית.

- ייתכן שחלק מההפעלות הקשורות לחיבור לרשת יהיו שונות מהמצופה בהתאם לביצועים ולפונקציות הנתמכות של המכשיר שברשותכם.
- להגדרת חיבור הרשת אל הנתב או המודם שברשותכם, עיינו במדריך למשתמש של הנתב או המודם.
- מערכת השמע האלחוטית בעלת תחנת העגינה תומכת בפרוטוקולי האבטחה הבאים:
  - Open ← WEP
  - TKIP ← WPA-PSK
  - AES ← WPA2-PSK
- באפשרותכם לחבר את מערכת השמע האלחוטית בעלת תחנת העגינה אל רשת לא מאובטחת וללא סיסמה.
- אם הנתב האלחוטי שלכם תומך ב-DHCP, באפשרות מערכת השמע האלחוטית בעלת תחנת העגינה להשתמש ב-DHCP או בכתובת IP קבועה כדי להתחבר לרשת האלחוטית.
- בחרו בנתב האלחוטי בערוץ שאינו בשימוש כעת, אם הערוץ שהוגדר בנתב האלחוטי נמצא כעת בשימוש על-ידי התקן קרוב אחר, הדבר עלול לגרום להפרעות ולבעיה בהתחברות.
- במקרה שבחרתם במצב 802.11n (Greenfield) High-throughput Pure והגדרתם את סוג ההצפנה בנתב כ-WEP או TKIP, מערכת השמע האלחוטית בעלת תחנת העגינה לא תתמוך בחיבור בהתאם למפרטי אישורי ה-Wi-Fi החדשים.
- LAN אלחוטי, מטבעו, עלול לגרום להפרעות, בהתאם לתנאי השימוש (ביצועי נתב, מרחק, מכשולים, הפרעות הנגרמות על-ידי מכשירי רדיו אחרים וכדומה)
- WPS(PBC) / WPS(PIN) לא פועל כאשר פרוטוקול האבטחה מוגדר כ-WEP.
- אם לא הצלחתם להגדיר רשת, לחצו לחיצה ארוכה על הלחצן **WPS/RESET** שבלוח האחורי עד שהמחוון או מהבהב פעמיים. חכו עד שהאור האדום מפסיק להבהב, כבו את היחידה והפעילו אותה מחדש. נסו שנית.

לחיבור מערכת השמע האלחוטית בעלת תחנת העגינה אל התקן Apple בעלת מערכת הפעלה iOS 5.0 ומעלה (Info Sharing)

שיטת הגדרת רשת זו מיועדת למשתמשים בהתקן Apple בעל מערכת הפעלה iOS 5.0 ומעלה.

1. חברו את התקן ה-Apple שברשותכם לרשת

2. בחרו ב- במערכת השמע האלחוטית בעלת תחנת העגינה, וחברו את התקן ה-iPod/iPhone/iPad שברשותכם אל תחנת העגינה הכפולה.

3. לחצו לחיצה ארוכה על הלחצן **WPS/RESET** שבלוח האחורי של מערכת השמע האלחוטית בעלת תחנת העגינה באמצעות קצה עט או פריט דומה במשך יותר משנייה אחת. הסמל יהבהב פעם אחת. שחררו את הלחצן.

4. בחרו ב-<**Allow**> (אפשר) בתפריט המוקפץ שבתצוגת התקן Apple.

5. שנו את המצב ל- ונורית המחוון תהבהב באדום, ואז תאיר בלבן באופן יציב.
לאחר חיבור מערכת השמע האלחוטית בעלת תחנת העגינה, המחוון מפסיק להבהב באדום והוא מאיר בלבן.

- החיבור לרשת הושלם.

חיבור מערכת השמע האלחוטית בעלת תחנת העגינה באמצעות WPS (PBC)

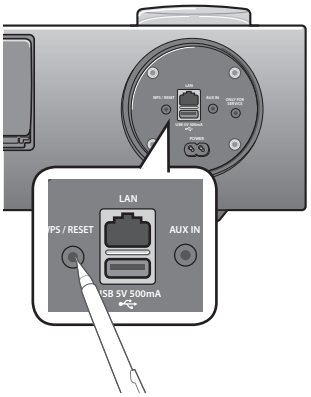

1. לחצו שוב ושוב על הלחצן **F** שבלוח העליון של מערכת השמע האלחוטית בעלת תחנת העגינה עד שהסמל או יופיע בתצוגה.

- בכל לחיצה על הלחצן, הבחירה משתנה באופן הבא:
  AUX ← ← ← ← ← ← (נורית ה-LED כבויה)
  המחוון משנה את צבעו מלבן לאדום ומתחיל להבהב.

2. לחצו לחיצה ארוכה על הלחצן **WPS/RESET** שבלוח האחורי באמצעות קצה עט או פריט דומה במשך יותר משנייה אחת. המחוון יהבהב פעם אחת בלבן. לאחר שהמחוון הבהב, שחררו את הלחצן.

- המחוון מהבהב באדום.

3. לחצו על הלחצן **WPS/RESET** בנתב או במודם בתוך 90 שניות.

4. לאחר חיבור מערכת השמע האלחוטית בעלת תחנת העגינה, המחוון או משנה את צבעו מאדום מהבהב ללבן.

- החיבור לרשת הושלם.

לחיבור מערכת השמע האלחוטית בעלת תחנת העגינה באמצעות חיבור JBC (JukeBox Connect)

1. לחצו שוב ושוב על הלחצן **F** שבלוח העליון של מערכת השמע האלחוטית בעלת תחנת העגינה עד שהסמל או יופיע בתצוגה.

- בכל לחיצה על הלחצן, הבחירה משתנה באופן הבא:
  AUX (נורית ה-LED כבויה)
  המחוון משנה את צבעו מלבן לאדום ומתחיל להבהב.

2. לחצו לחיצה ארוכה על הלחצן **WPS/RESET** שבלוח האחורי באמצעות קצה עט או פריט דומה במשך יותר מחמש שניות. המחוון מהבהב פעם אחת בלבן. חכו עד שהמחוון יהבהב בלבן עוד פעמיים, ושחררו את הלחצן **WPS/RESET**.

- המחוון מהבהב באדום, ואז מפסיק להבהב ומאיר באדום כאשר היחידה נכנסת למצב הגדרת רשת.

3. כדי לחבר את מערכת השמע האלחוטית בעלת תחנת העגינה לרשת, חפשו את "**Samsung W_Audio E750 XXXXXXX**" ברשימת הגדרות ה-Wi-Fi של התקן ה-WI-Fi שברשותכם, ובחרו בו.

לדוג' התקן Samsung Galaxy

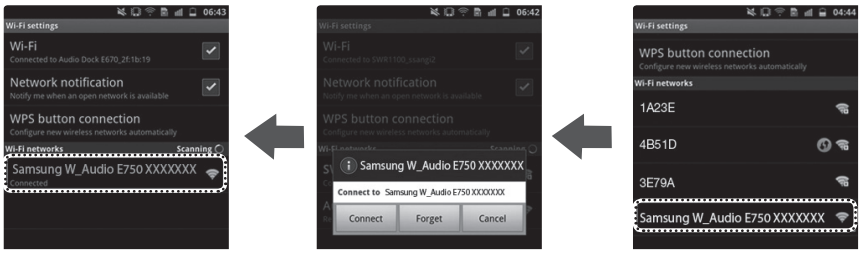

4. פתחו את דפדפן הרשת של התקן ה-Wi-Fi שאותו תרצו לחבר והזינו "**http://192.168.1.1**" בשורת הכתובת של הדפדפן כדי להיכנס לאתר של מערכת השמע האלחוטית בעלת תחנת העגינה.

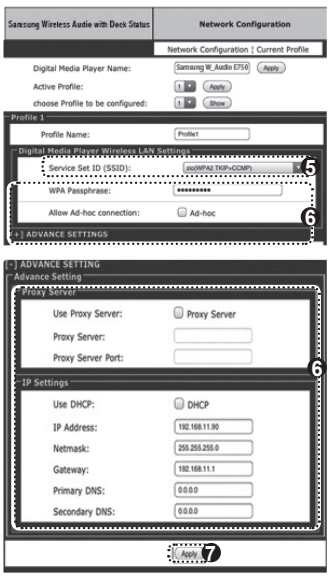

5. בשדה "**Service Set ID (SSID)**" (מזהה קבוע לשירות), בחרו בהתקן נקודת הגישה (נתב או מודם) שאליו מחובר התקן ה-Wi-Fi שברשותכם.

6. הזינו את סיסמת נקודת הגישה בשדה "**WPA Passphrase**" (סיסמת WPA). אם ברצונכם להגדיר כתובת IP סטטית, לחצו על ההגדרות המתקדמות. הזינו את כתובת ה-IP הסטטית הרצויה.

7. לחצו על <**Apply**> (החל).
אם מופיעה אזהרה על גבי מסך התקן ה-Wi-Fi, לחצו על OK (אישור).

8. כאשר הושלם החיבור בין מערכת השמע האלחוטית בעלת תחנת העגינה לבין נקודת הגישה שבה בחרתם, המחוון על גבי מערכת השמע האלחוטית בעלת תחנת העגינה משנה את צבעו ללבן.

- חיבור מערכת השמע האלחוטית בעלת תחנת העגינה הסתיים.

※ התמונה שלעיל הוא המסך שיופיע בתצוגה לאחר השלמת החיבור לרשת בהצלחה, כך שתוכלו להריץ את יישומי AirPlay ו-DLNA באופן תקין.

חיבור מערכת השמע האלחוטית בעלת תחנת העגינה באמצעות WPS PIN

1. לחצו שוב ושוב על הלחצן **F** שבלוח העליון של מערכת השמע האלחוטית בעלת תחנת העגינה עד שהסמל או יופיע בתצוגה.

- בכל לחיצה על הלחצן, הבחירה משתנה באופן הבא:
  ← **AUX** ← ← ← ← ← **(נורית ה-LED כבויה)**
  המחוון משנה את צבעו מלבן לאדום ומתחיל להבהב.

2. לחצו לחיצה ארוכה על הלחצן **WPS/RESET** שבלוח האחורי באמצעות קצה עט או פריט דומה במשך יותר מחמש שניות. המחוון מהבהב פעם אחת בלבן. חכו עד שהמחוון יהבהב בלבן עוד פעמיים, ושחררו את הלחצן **WPS/RESET**.

- המחוון מהבהב באדום, ואז מפסיק להבהב ומאיר באדום כאשר היחידה נכנסת למצב הגדרת רשת.

3. כדי לחבר את מערכת השמע האלחוטית בעלת תחנת העגינה לרשת, חפשו את "**Samsung W_Audio E750 XXXXXXX**" ברשימת הגדרות ה-Wi-Fi של התקן ה-Wi-Fi שברשותכם, ובחרו בו.

לדוג' התקן Samsung Galaxy

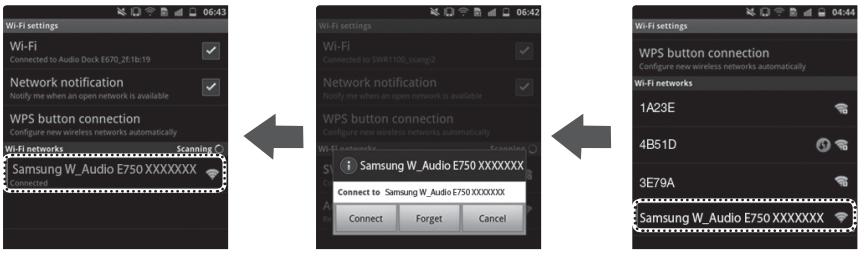

4. פתחו את דפדפן הרשת של התקן ה-Wi-Fi והזינו "**http://192.168.1.1**" בשורת הכתובת של הדפדפן.

5. לחצו או געו ב-Samsung Wireless Audio with Dock Status.

6. מספר ה-**WPS PIN** מופיע בתחתית המסך. רשמו בפניכם את המספר ואז כבו והפעילו שנית את מערכת השמע האלחוטית בעלת תחנת העגינה.

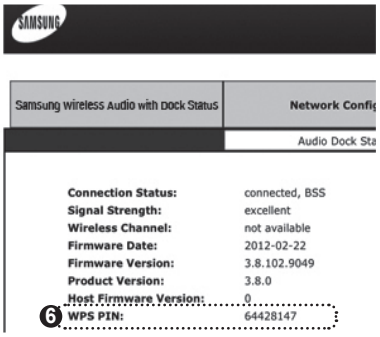

7. היכנסו לעמוד התקנת ה-Wi-Fi שבנקודת הגישה (נתב או מודם אלחוטי) באמצעות המחשב או כל התקן תומך אינטרנט אחר, והגדירו את הגדרות ה-Wi-Fi לשיטת PIN. להוראות, עיינו במדריך למשתמש של הנתב או המודם שבקשותכם.

8. הזינו את מספר ה-PIN WPS של מערכת השמע האלחוטית בעלת תחנת העגינה בשדה המתאים שבעמוד הגדרת ה-Wi-Fi.

9. לחצו לחיצה ארוכה על הלחצן **WPS/RESET** שבלוח האחורי של מערכת השמע האלחוטית בעלת תחנת העגינה באמצעות קצה עט או פריט דומה במשך יותר מעשר שניות במצב או . המחוון מהבהב פעם אחת בלבן, ואז פעמיים. חכו עד שהמחוון הבהב שלוש פעמים ושחררו את הלחצן.

- הסמל מהבהב באדום.

10. אם החיבור בין מערכת השמע האלחוטית בעלת תחנת העגינה לבין נקודת הגישה שבחרתם הושלם בתוך 90 שניות, המחוון משנה את צבעו מאדום ללבן.

- חיבור מערכת השמע האלחוטית בעלת תחנת העגינה הסתיים.

- פונקציית Wi-Fi Direct לא נתמכת על-ידי מכשיר זה.
  חיבור ישיר עלול להצליח במספר מקרים, אבל הוא אינו פונקציה הנתמכת על-ידי מכשיר זה.

BLUETOOTH

באפשרותכם לחבר את מערכת השמע האלחוטית בעלת תחנת העגינה אל התקני Bluetooth וליהנות ממוזיקה בעלת צליל סטריאו באיכות גבוהה, כל זאת באופן אלחוטי!

מהו Bluetooth?

טכנולוגיית Bluetooth מאפשרת להתקנים תואמי Bluetooth להתחבר בקלות אלה עם אלה באמצעות חיבורים אלחוטיים קצרים.

- התקן Bluetooth עשוי לגרום לרעשים או לתקלות, בהתאם לאופן השימוש, כאשר:
  - חלק מגופכם נוגע במערכת שמשדרת אל התקן ה-Bluetooth או אל מערכת השמע האלחוטית בעלת תחנת העגינה או שמקבלת מהם שידורים.
  - השידורים מההתקן נחסמים על-ידי מכשולים כגון קיר, פינה או מחיצות משרדיות.
  - שידורי ההתקן משובשים על-ידי הפרעות חשמליות מהתקנים המשדרים באותו טווח תדרים, כגון מכשירים רפואיים, מיקרוגלים ומתאם LAN אלחוטי.
- בעת צימודם הציבו את התקן ה-Bluetooth בקרבת מערכת השמע האלחוטית בעלת תחנת העגינה .
- ככל שהתקן ה-Bluetooth יהיה רחוק יותר ממערכת השמע האלחוטית בעלת תחנה העגינה, כך איכות הקליטה תהיה גרועה יותר. אם המרחק יהיה גדול מטווח הפעולה של התקן ה-Bluetooth, החיבור יתנתק.
- באזורים בעלי איכות קליטה ירודה, ייתכן שחיבור התקן ה-Bluetooth לא יפעל כהלכה.
- חיבור התקן ה-Bluetooth פועל כהלכה רק כאשר הוא נמצא בקרבת המערכת. החיבור נקטע באופן אוטומטי אם התקן ה-Bluetooth יוצא מהטווח. גם בתוך טווח הפעולה, ייתכן שאיכות הקול תיפגע בשל מכשולים כגון קירות או דלתות.
- התקן אלחוטי זה עשוי לגרום להפרעות חשמליות במהלך הפעלתו.

- ייתכן שתתבקשו להזין קוד PIN (סיסמה) בשעת חיבור התקן ה-Bluetooth אל מערכת השמע האלחוטית בעלת תחנת העגינה. אם יופיע חלון הזנת קוד PIN, הזינו את הסיסמה <0000>.
- מערכת השמע האלחוטית בעלת תחנת העגינה תומכת בנתוני SBC (44.1kHz, 48kHz).
- מאפיין ה-AVRCP אינו נתמך.
- יש לחבר התקן Bluetooth התומך בפונקציית A2DP (AV) בלבד.
- לא ניתן לחבר התקן Bluetooth התומך בפונקציית HF (Hands Free) בלבד.
- ניתן לצמד התקן Bluetooth אחד בלבד בכל פעם.
- לאחר שכיביתם את מערכת השמע האלחוטית בעלת תחנת העגינה והצימוד נותק, הצימוד לא יתחדש באופן אוטומטי. כדי לחדשו, עליכם לצמד את ההתקן מחדש.
- מערכת השמע האלחוטית בעלת תחנת העגינה עשויה שלא לחפש או להתחבר כהלכה אל ההתקן במקרים שלהלן:
  - אם ישנו שדה חשמלי חזק בסביבת מערכת השמע האלחוטית בעלת תחנת העגינה.
  - אם מצומדים מספר התקני Bluetooth אל מערכת השמע האלחוטית בעלת תחנת העגינה.
  - אם התקן ה-Bluetooth כבוי, אינו נמצא במקומו או שיש בו תקלה.
  - שימו לב שישנם התקנים כגון מיקרוגלים, מתאמי LAN אלחוטיים, מנורות פלואורסנט ותנורי גז המשתמשים באותו טווח תדרים שבו משתמש התקן ה-Bluetooth, והעשויים לגרום להפרעות חשמליות.

חיבור להתקני BLUETOOTH

סעיף זה מסביר איך לחבר את מערכת השמע האלחוטית בעלת תחנת העגינה אל טלוויזיות תואמות Bluetooth והתקנים אחרים.

לחיבור מערכת השמע האלחוטית בעלת תחנת העגינה אל טלוויזיית Samsung מדגמי 2012 התומכת ב-Bluetooth (SoundShare)

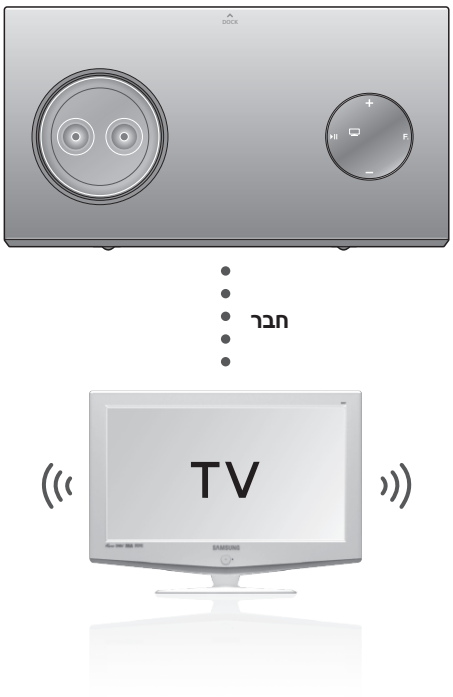

<לצימוד הטלוויזיה שברשותכם>

להפקה של צליל מהטלוויזיה מתוך מערכת השמע האלחוטית בעלת תחנת העגינה באמצעות חיבור Bluetooth, יש ראשית לצמד את המערכת אל טלוויזיה תואמת Bluetooth. לאחר שהצימוד הושלם, נתוני הצימוד נרשמים ונשמרים ולא יופיעו עוד הודעות בנוגע לחיבור Bluetooth. יש לשמור את התקן השמע האלחוטי בעל תחנת העגינה קרוב אל הטלוויזיה לפני הצימוד. (מומלץ לצמד התקנים הנמצאים במרחק 1 מטרים זה מזה).

1. הפעילו את הטלוויזיה של Samsung ואת מערכת השמע האלחוטית בעלת תחנת העגינה.

- הגדירו את התפריט "Add New Device" (הוסף התקן חדש) כ-"On" (פועל) בטלוויזיה. (למידע נוסף, עיינו במדריך למשתמש בטלוויזיה) Menu (תפריט) ← System (מערכת) ← Device Manager (מנהל התקן) ← SoundShare Settings (הגדרות SoundShare) ← Add New Device (הוסף התקן חדש).

2. כשאתם משנים את מצב מערכת השמע האלחוטית בעלת תחנת העגינה למצב ⊏, תופיע הודעה השואלת האם להמשיך בצימוד ה-Bluetooth. בחרו ב-<**Yes**>(כן) במסך הטלוויזיה, ואז יושלם הצימוד עם מערכת השמע האלחוטית בעלת תחנת העגינה.

- המחוון ⊏ מהבהב, ואז מפסיק להבהב.
- צימוד ה-Bluetooth של מערכת השמע האלחוטית בעלת תחנת העגינה הסתיים.

<לביטול הצימוד לטלוויזיה שברשותכם>

אם ברצונכם לצמד את מערכת השמע האלחוטית בעלת תחנת העגינה שברשותכם אל טלוויזיה אחרת מזו המחוברת, עליכם לבטל את הצימוד הנוכחי במערכת השמע האלחוטית בעלת תחנת העגינה. ניתן לבטל את הצימוד באופן הבא.

נורית המחוון ⊏ תהבהב פעם אחת כאשר תלחצו על הלחצן**WPS/RESET** בלוח האחורי של היחידה במשך יותר משנייה אחת ב-⊏. יחידה זו תצומד באופן אוטומטי אל הטלוויזיה ברגע שהצימוד הקיים מבוטל והטלוויזיה מוכנה לחיבור.

- אם לא ניתן לחבר את הטלוויזיה, נסו לחבר אותה שוב לאחר לחיצה על הלחצן WPS/RESET בלוח האחורי של המערכת במצב Bluetooth ⊏.
- מומלץ לעדכן את התוכנה של הטלוויזיה אל הגרסה האחרונה כדי להפעיל את פונקציית צימוד הטלוויזיה(SoundShare).
- בדקו את הוראות העדכון ואת הדגמים הרלוונטיים בעמוד התמיכה באתר (http://www.samsung.com או צרו קשר עם מרכז התמיכה הטכנית.

לחיבור מערכת השמע האלחוטית בעלת תחנת העגינה אל התקן Bluetooth

לפני ההתחלה, ודאו שהתקן ה-Bluetooth תומך בפונקציית האוזניות תואמת ה-Bluetooth.

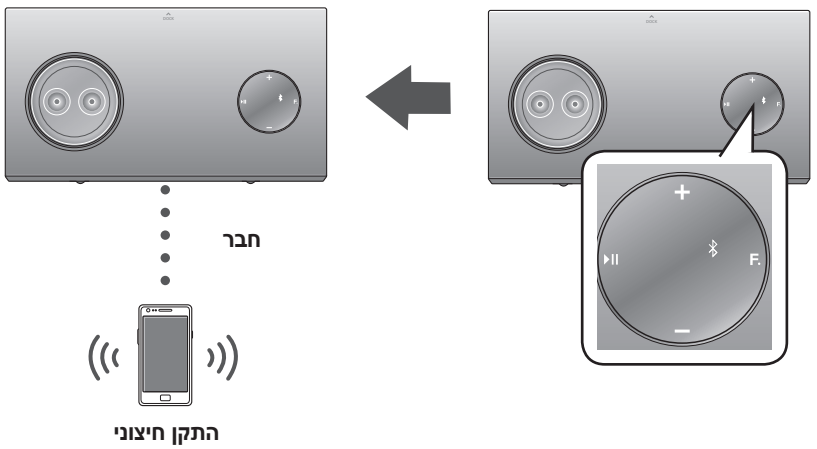

1. לחצו שוב ושוב על הלחצן **F.** שבלוח העליון של מערכת השמע האלחוטית בעלת תחנת העגינה עד שהסמל ᛒ יופיע בתצוגה.

- בכל לחיצה על הלחצן, הבחירה משתנה באופן הבא:
  AUX ← ← ← ← ← ← (נורית ה-LED כבויה)
- המצב שנבחר מסומן בלבן בתצוגת Function (פונקציה).

2. בחרו בתפריט Bluetooth בהתקן ה-Bluetooth שברשותכם.
(להוראות, עיינו במדריך למשתמש של התקן ה-Bluetooth).

3. סרקו או חפשו את All Devices (כל ההתקנים) או Headsets (אוזניות).

- תוצג בפניכם רשימת התקנים.

4. בחרו באפשרות "**[Samsung]W_Audio XXXXXX**" מתוך הרשימה.

- אם הצימוד של התקן ה-Bluetooth עם מערכת השמע האלחוטית בעלת תחנת העגינה לא מצליח, מחקו את "[Samsung]W_Audio XXXXXX" שנמצא על-ידי התקן ה-Bluetooth, חפשו שוב את מערכת השמע האלחוטית בעלת תחנת העגינה, וחזרו על שלבים 2, 3 ו-4.

השמעה

שימוש במצב TV (SoundShare)

לחצו על לחצן **F.** לבחירה במצב ▭ וחברו את הטלוויזיה למערכת השמע האלחוטית בעלת תחנת העגינה. (ראו עמוד 21).

- היחידה תפעיל את שמע הטלוויזיה כאשר היא תחובר אל טלוויזיה.
- אם תשנו את קלט ה-Bluetooth של מערכת השמע האלחוטית בעלת תחנת העגינה או תכבו את המערכת, תשמעו שוב את השמע מתוך הטלוויזיה עצמה.

▪ באפשרותכם לשלוט בעוצמת הקול באמצעות מערכת השמע האלחוטית בעלת תחנת העגינה בלבד.

שימוש במצב העגינה עם התקני SAMSUNG GALAXY ו-APPLE

לחצו על לחצן **F.** לבחירה במצב 📱 וחברו את התקן ה-Samsung Galaxy או Apple לתחנת העגינה הכפולה. (ראו עמוד 13)

<התקני Samsung Galaxy>

לשימוש בהתקן מסדרת Samsung Galaxy עם תחנת העגינה הכפולה, עליכם להוריד ולהתקין את יישום Docking Mode (מצב עגינה) מ-Android Market אל ההתקן. להורדה, מלאו אחר השלבים הבאים:

1. לחצו על סמל ה-Play Store (חנות Android) שבמסך הראשי של התקן ה-Samsung Galaxy.

2. לחצו על סמל החיפוש שבמסך כדי להיכנס לסרגל החיפוש.

3. בסרגל החיפוש, הזינו את הביטוי [**Samsung Wireless Audio Dock**] (תחנת עגינה לשמע של Samsung), וחפשו.

4. ברשימת תוצאות החיפוש, מצאו, ואז הקישו על [**Samsung Wireless Audio Dock**] (תחנת עגינה לשמע של Samsung) להתחלת ההורדה.

5. לחצו על [**Install**] (התקנה).

להפעלת מוזיקה, מלאו אחר הצעדים הבאים:

1-1. אם תפעילו את היישום כאשר מערכת השמע האלחוטית בעלת תחנת העגינה היא ההתקן היחיד המחובר האמצעות Bluetooth, הבחירה ב-PLAY (הפעלה) בהתקן תיצור את חיבור ה-Bluetooth אל מערכת השמע האלחוטית בעלת תחנת העגינה באופן אוטומטי והיחידה תתחיל להשמיע מוזיקה.

1-2. אם ישנם מספר התקני Bluetooth כולל מערכת השמע האלחוטי בעלת תחנת העגינה,

1) כאשר תפעילו את היישום, רשימת ההתקנים הניתנים לחיובר אל מערכת השמע האלחוטית בעלת תחנת העגינה תופיע.

2) השמיעו מוזיקה לאחר חיבור אל מערכת השמע האלחוטית בעלת תחנת העגינה על-ידי בחירה בנגן ברשימת ההתקנים.

- אל מערכת השמע האלחוטית בעלת תחנת העגינה, הוא לא יופע ברשימה, אלא יחובר באופן אוטומטי.

2. אם תחליפו את מערכת השמע האלחוטית בעלת תחנת העגינה המצומדת אל ההתקן הנייד, עליכם למחוק את ההגדרות שנותרו בהתקן לפני צימוד של מערכת חדשה.

- ⚙ ← [**Clear data (מחק נתונים)**].

- ברגע שהפעלתם את היישום, הפעולה לא תופסק בעת הטענת ההתקן הנייד באמצעות מטען רגיל.
- כאשר תחברו התקן אחר אל מערכת השמע האלחוטית בעלת תחנת העגינה לאחר חיבור התקן Samsung Galaxy במצב עגינה, ייתכן שתיאלצו לכבות את מצב Bluetooth בהתקן ה-Samsung Galaxy.
- אם אתם נתקלים בבעיות בחיבור התקן ה-Samsung Galaxy אל תחנת העגינה הכפולה, כבו את מצב Bluetooth בכל שאר ההתקנים.

<התקן Apple>

1. בחרו במצב כמתואר למעלה, וחברו את התקן Apple אל תחנת העגינה הכפולה כמתואר ב-"חיבור התקן אל תחנת העגינה הכפולה" (עמוד 13). תשמעו צלצול.

2. בחרו בתפריט <**Music**> (מוזיקה) שבמסך הראשי של התקן ה-Apple.

3. בחרו במוזיקה שתרצו לשמוע והשמיעו אותה.

• המוזיקה תושמע דרך הרמקולים של מערכת השמע האלחוטית בעלת תחנת העגינה.

- בעת הפעלת קובץ וידאו בהתקן שברשותכם, יתכן שהפעולות הפעלה/השהיה/מעבר אל הרצועה הבאה/מעבר אל הרצועה הקודמת לא תהיינה זמינות. השתמשו בלחצן בהתקן כדי להפעיל אותו.

רשימת תאימות (התקן Apple)

דגמי iPod/iPhone תואמים למצב עגינה
עדכנו את התוכנה של מכשיר ה-iPod/iPhone שברשותכם לגרסת התוכנה העדכנית ביותר לפני השימוש ביחידה זו.

- iPod touch (דור 4)
- iPod touch (דור 3)
- iPod nano (דור 6)
- iPod nano (דור 5)
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPad 2
- iPad

• בהתאם לגרסת תוכנת iPod, ההתקן עשוי לא להתאים או לפעול באופן לא תקין.

※ אם תחברו התקן Apple לא תואם, נורית פונקציית ה-iPod תהבהב.

שימוש במצב BLUETOOTH

לחצו על לחצן **F.** לבחירה במצב ᛒ וחברו את התקן ה-Bluetooth למערכת השמע האלחוטית בעלת תחנת העגינה. (ראו עמוד 22).

לחיבור התקן ה-Bluetooth כשמערכת השמע האלחוטית בעלת תחנת העגינה נמצאת במצב Bluetooth, חפשו את מערכת השמע האלחוטית בעלת תחנת העגינה ברשימת ה-Bluetooth של ההתקן. בחרו במערכת השמע האלחוטית בעלת תחנת העגינה, והתחברו. ברגע שהתחברתם אל מערכת השמע האלחוטית בעלת תחנת העגינה, בחרו במוזיקה שלה ברצונכם להאזין והפעילו אותה.

המוזיקה תושמע דרך הרמקולים של מערכת השמע האלחוטית בעלת תחנת העגינה.

- אם ברצונכם להחליף את ההתקן המחובר באמצעות Bluetooth בהתקן אחר, נתקו את ההתקן הקיים ונסו להתחבר אל ההתקן האחר שבו תרצו להשתמש.
- בזמן חיבור באמצעות Bluetooth, ייתכן שחלק מאפשרויות ההפעלה/השהיה/מעבר לקטע הבא/מעבר לקטע הקודם לא יהיו זמינות, בהתאם לדגם ההתקן הנייד ובהתאם ליישום.
- הפעלה של התקן Bluetooth המצומד עם מערכת השמע האלחוטית בעלת תחנת העגינה עשוי לגרום לפעולה מקוטעת אם תפעילו אותו בזמן שמערכת השמע האלחוטית בעלת תחנת העגינה מפעילה קלט מחיבור AUX.

ניתוק התקן ה-Bluetooth ממערכת השמע האלחוטית בעלת תחנת העגינה

באפשרותכם לבטל את צימוד התקן ה-Bluetooth אלמערכת השמע האלחוטית בעלת תחנת העגינה. לקבלת הוראות יש לעיין במדריך למשתמש של התקן ה-Bluetooth.

- מערכת השמע האלחוטית בעלת תחנת העגינה תנותק.

ניתוק מערכת השמע האלחוטית בעלת תחנת העגינה מהתקן ה-Bluetooth

לחצו על הלחצן **F.** שבלוח העליון של מערכת השמע האלחוטית בעלת תחנת העגינה כדי לעבור ממצב ᛒ למצב אחר או לחצו על לחצן ההפעלה בשלט רחוק כדי לכבות את מערכת השמע האלחוטית בעלת תחנת העגינה.

- ההתקן המחובר הנוכחי ינותק.

- חיבור ה-Bluetooth פועל כהלכה רק כאשר הוא נמצא בקרבת המערכת. החיבור יתנתק באופן אוטומטי כאשר ההתקן יוצב מחוץ לטווח הפעולה. גם בתוך טווח הפעולה, ייתכן שאיכות הקול תיפגע בשל מכשולים כגון קירות או דלתות.
- אם התקן ה-Bluetooth יחזור אל תוך טווח ההפעלה, תוכלו להפעילו מחדש כדי לחדש את הצימוד עם התקן ה-Bluetooth.

שימוש במצב USB

1. חברו את התקן ה-USB אל כניסת ה-USB שבגב המכשיר.

2. לחצו שוב ושוב על הלחצן **F.** שבלוח העליון של מערכת השמע האלחוטית בעלת תחנת העגינה עד שהסמל ⇜ יופיע בתצוגה.

- בכל לחיצה על הלחצן, הבחירה משתנה באופן הבא:
  ⇜ ← ⭘ ← ⭘ ← ⭘ ← ⭘ ← **AUX (נורית ה-LED כבויה)**
- המצב שנבחר מסומן בלבן בתצוגת Function (פונקציה).

לפני חיבור התקן USB

קראו את הרשימה שלהלן ובדקו את התאימות.

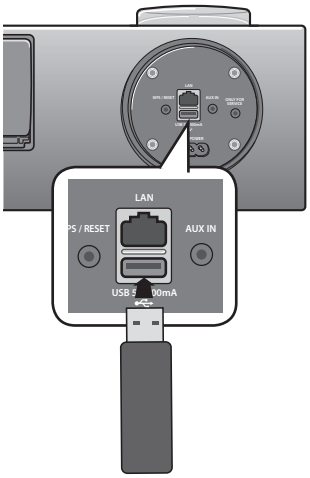

- ייתכן שמכשיר זה לא יהיה תואם לסוגים מסוימים של התקני אחסון USB.
- המכשיר תומך במערכות קבצים מסוג FAT16 ו-FAT32.
  - מערכת הקבצים NTFS אינה נתמכת.
- חברו את התקן ה-USB ישירות אל כניסת ה-USB שבמכשיר. אחרת, ייתכן שתיווצר בעיית תאימות של התקן ה-USB.
- אין לחבר אל המוצר התקני אחסון מרובים באמצעות קורא כרטיסים משולב. הוא עשוי שלא לפעול כהלכה.
- המכשיר אינו תומך בפרוטוקולי PTP של מצלמות דיגיטליות.
- אין לנתק את התקן ה-USB בזמן שהוא נקרא על-ידי המכשיר.
- המכשיר אינו מנגן קובצי מוזיקה בהגנת DRM (MP3, WMA) שהתקבלו מאתר מסחרי.
- המכשיר אינו תומך בכוננים קשיחים חיצוניים.
- רשימת תאימות

תבנית	מוזיקה	
שם קובץ	MP3	WMA
סיומת קובץ	.MP3	.WMA
קצב סיבית	80~320 kbps	56~128 kbps
גרסה	-	V8
תדירות דגימה	44.1KHz	44.1KHz

※ אין לחבר בו-זמנית את ההתקן הנייד שברשותכם אל שקע ה-USB ואל תחנת העגינה להטענה.

הפעלת מצב AIRPLAY ו-ALLSHARE PLAY

כדי להשתמש בפונקציה או בפונקציה , יש לחבר את מערכת השמע האלחוטית בעלת תחנת העגינה ואת ההתקן שאליו ברצונכם לחבר את המערכת אל אותה נקודת גישה.

<מצב Airplay_ >

1. השמיעו את המוזיקה הרצויה מתוך תפריט <**Music**> (מוזיקה) שבמסך הראשי של התקן ה-Apple.

2. בחרו באפשרות "**Samsung W_Audio E750 XXXXXXX**" על ידי לחיצה על הסמל שבמסך התקן ה-Apple.

• המוזיקה תושמע דרך הרמקולים של מערכת השמע האלחוטית בעלת תחנת העגינה.

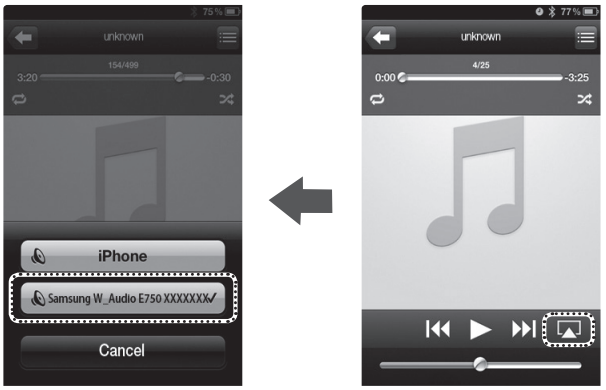

※ לאחר שהצלחתם לחבר את iTunes אל מערכת השמע האלחוטית בעלת תחנת העגינה באמצעות אותה כתובת IP פעם אחת, המכשיר יעבור באופן אוטומטי למצב AirPlay כאשר תבחרו במערכת השמע האחלחוטית בעלת תחנת העגינה ותפעילו מוזיקה ב-iTunes במצב שאינו מצב AirPlay.

▪ זמן התגובה של המערכת לפקודה מהשלט רחוק נמשך 3~5 שניות.

<מצב Allshare Play_ >

1. בחרו בתפריט AllShare שבמסך הראשי של התקן ה-Galaxy.

2. היכנסו אל [**Audio**] (שמע) שבמצב Allshare Play, ובחרו במוזיקה שאותה תרצו להשמיע.

3. אם מופיע חלון מוקפץ <**Select device**> (בחירת התקן), בחרו באפשרות "**Samsung W_Audio E750 XXXXXXX**".

• המוזיקה תושמע דרך הרמקולים של מערכת השמע האלחוטית בעלת תחנת העגינה.

▪ ייתכן שמכשיר זה אינו תומך בפונקציית השליטה בהתאם לפונקציות של היישום ולתחנת העגינה של המכשיר.

פונקציות

פונקציות בסיסיות

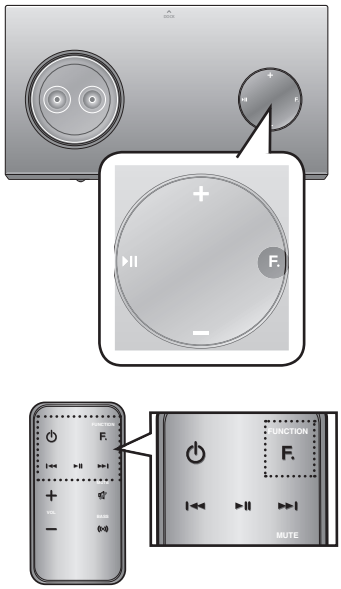

שימוש במצבי הכניסה

ניתן לבחור מבין הכניסות הבאות: ← ← ← ← ← ← **AUX (נורית ה-LED כבויה)**

לחצו על הלחצן המתאים שבשלט רחוק כדי לבחור במצב הרצוי, או לחצו על **F.** כדי לבחור מבין המצבים: ← ← ← ← ← ← **AUX (נורית ה-LED כבויה)**

מצב כניסה	תצוגה
מצב TV	
מצב תחנת עגינה	
מצב BLUETOOTH	
מצב USB	
מצב Airplay	
מצב Allshare Play	
כניסת AUX	נורית ה-LED כבויה

פונקציות מתקדמות

PLAY /PAUSE (הפעלה/השהיה)

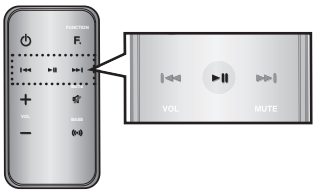

במהלך ההשמעה לחצו על הלחצן ►II.

- לחצו שוב על הלחצן ►II כדי לעצור את ההשמעה באופן זמני.
  לחצו שוב על הלחצן ►II כדי להשמיע את הקובץ שנבחר.

▪ ייתכן שפונקציה זו לא תפעל במצבים מסוימים.

Skip Forward/Back (דלג קדימה/אחורה)

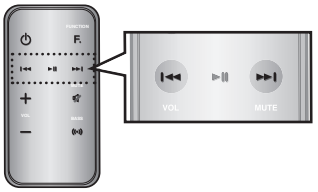

במהלך ההשמעה לחצו על הלחצנים ►►I,I◄◄ .

- כאשר ישנם מספר קבצים ואתם לוחצים על לחצן ►►I, ייבחר הקובץ הבא.
- כאשר ישנם מספר קבצים ואתם לוחצים על לחצן I◄◄, ייבחר הקובץ הקודם.

▪ ייתכן שפונקציה זו לא תפעל במצבים מסוימים.

השתקת הקול

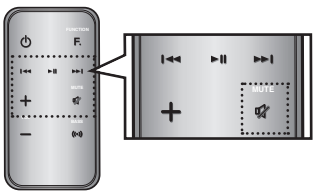

פונקציה זו שימושית כאשר אתם צריכים לענות לטלפון או לפתוח את הדלת.

1. כדי להשתיק את הקול במכשיר זה, לחצו על לחצן **MUTE** (השתקה) ( ) שבשלט רחוק.

2. כדי להמשיך את ההשמעה לחצו שוב על לחצן **MUTE** (השתקה) ( ) שבשלט רחוק (או לחצו על **VOLUME +/–**(עוצמת קול)).

שימוש בפונקציית BASS (בס)

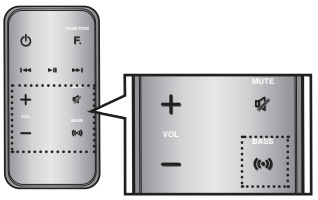

לשמיעה מיטבית של צליל הבס בהתאם להעדפותיכם.

לחצו על לחצן **BASS (בס)** שבשלט רחוק של המכשיר.

- בכל לחיצה על הלחצן, הבחירה משתנה באופן הבא:
  BASS ON (בס מופעל) ← OFF (בס כבוי)

שדרוג תוכנה (במצב USB בלבד)

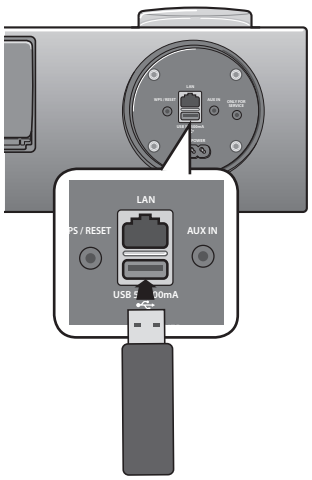

1. בקרו בכתובת www.samsung.com.
2. לחצו על **SUPPORT** (תמיכה) בחלקו הימני העליון של העמוד.
3. הזינו את מספר הדגם של המוצר בשדה החיפוש, ולאחר מכן לחצו על **Find Product** (מצא מוצר).
4. לחצו על **Get downloads** (קבל הורדות) במרכז העמוד, מתחת לכותרות ההורדות.
5. לחצו על **Firmware** (קושחה) במרכז העמוד.
6. לחצו על סמל קובץ **ZiP** של קובץ השדרוג.
7. ברגע שהחלון המוקפץ מופיע, לחצו על**OK** (אישור) והמשיכו לשמירה והתקנה של קובץ השדרוג במחשבכם.
8. חלצו את הקבצים שבתוך קובץ ה-zip. הדחוס אל תוך תיקייה ייעודית במחשבכם.
9. העתיקו את כל הקבצים שבתיקייה אל הספרייה הראשית של התקן ה-USB.
   - השדרוג מאפשר להשתמש במערכת קובצי שדרוג אחת בכל פעם.
10. לחצו שוב ושוב על הלחצן **.F** שבלוח העליון של מערכת השמע האלחוטית בעלת תחנת העגינה עד שהסמל ⇦ יופיע בתצוגה. הכניסו את כונן ה-USB אל כניסת ה-USB שבלוח האחורי של המכשיר.
11. נורית ה-LED תהבהב במשך תהליך עדכון התוכנה. המכשיר ייכבה באופן אוטומטי לאחר ששדרוג התוכנה יסתיים.
    - ייתכן ויידרש זמן רב יותר, בהתאם לפונקציות שאותן מעדכנים. (10 דקות לכל היותר)
    - הפעילו שוב את המכשיר.

- אין לכבות את המכשיר או לנתק את כונן ה-USB בעת השדרוג. המכשיר ייכבה באופן אוטומטי לאחר ששדרוג הקושחה יסתיים.
- לאחר שדרוג התוכנה, ההגדרות ששיניתם יתאפסו ויחזרו להגדרות ברירת המחדל (הגדרות היצרן).
  אנו ממליצים לכם לכתוב את ההגדרות המועדפות עליכם כדי שתוכלו לשחזר אותן בקלות לאחר השדרוג.
- אם שדרוג הקושחה נכשל, אנו ממליצים לפרמט את כונן ה-USB שבתבנית FAT16 ולנסות שוב.
- למטרות השדרוג, אין להגדיר את כונן ה-USB בתבנית NTFS. זוהי אינה מערכת קבצים נתמכת.
- ייתכן שהתקן ה-USB אינו נתמך, בהתאם ליצרן.
- תקו את מערכת השמע האלחוטית בעלת תחנת העגינה מהאינטרנט ומכל התקן חיצוני לפני ביצוע שדרוג לתוכנה.
- לא ניתן להטעין התקנים חיצוניים אחרים דרך שקע ה-USB.
- עיינו במדריך השדרוג באתר.

פתרון בעיות

בטרם תפנו לקבלת שירות, בדקו את הפרטים שלהלן.

בעיה	בדקו	פתרון
המכשיר אינו נדלק.	• האם כבל החשמל מחובר לשקע?	• חברו את כבל החשמל לשקע.
פונקציה מסוימת אינה פועלת בעת לחיצה על הלחצן.	• האם מערכת השמע האלחוטית בעלת תחנת העגינה או השלט רחוק נחשפו לחשמל סטטי?	• נתקו את כבל החשמל וחברו אותו שוב.
לא נשמעים צלילים.	• האם המכשיר מחובר אל התקן? •האם פונקציית ה-Mute (השתקה) פועלת? • האם עוצמת הקול מוגדרת לעוצמה הנמוכה ביותר?	• חברו אותו כהלכה. • לחצו על לחצן Mute (השתקה) כדי לבטל את הפונקציה. • שנו את עוצמת הקול.
השלט רחוק אינו פועל.	• האם הסוללות מרוקנות? • האם המרחק בין השלט רחוק לבין המכשיר גדול מדי?	• החליפו את הסוללות בסוללות חדשות. • השתמשו בשלט רחוק קרוב יותר למכשיר.
חיבור הרשת האלחוטי נכשל.	• בדקו האם נתב הרשת האלחוטית שלכם מוסמך לחיבור לרשת אלחוטית.	• ודאו שחיבור הרשת מוגדר ל-(Wireless(General (אלחוטי(כללי)). • ודאו כי מערכת השמע האלחוטית בעלת תחנת העגינה מחוברת אל נתב או מודם IP אלחוטי.
פעולת Sound Share (צימוד הטלוויזיה) נכשלה.	• האם הטלוויזיה מדגם התומך בפונקציה? • האם הקושחה של הטלוויזיה מהגרסה האחרונה? • האם אירעה תקלה בעת ההתחברות?	• בדקו האם הטלוויזיה מדגם התומך בפונקציה. (http://www.samsung.com) • עדכנו את הטלוויזיה לגרסת הקושחה העדכנית ביותר. • אפסו את היחידה. לחצו על הלחצן WPS/RESET במצב טלוויזיה. • צרו קשר עם מרכז התמיכה הטכנית.

נספח

מפרטים

שם דגם	DA-E750/ DA-E751	
כללי	משקל	9 ק"ג
	מידות (רוחב x עומק x גובה)	450 × 244.1 × 168.5 מ"מ
	טווח הטמפרטורה בפעולה	+5°C~+35°C
	טווח אחוזי הלחות בפעולה	10% עד 75%
מגבר	דירוג צריכת חשמל קדמי שמאל/ימין	1kHz ,THD = 1% ,20W/4OHM
	דירוג צריכת חשמל סאבוופר	70Hz ,THD=1% ,60W/8OHM
	רגישות/התנגדות קלט	400mV/56Kohm (AUX)
	יחס אות לרעש (קלט אנלוגי)	65 דציבלים
	הפרדה (1 קילוהרץ)	65 דציבלים
תגובת תדרים	קלט אנלוגי	20 הרץ~20 קילוהרץ (3± דציבלים)
	קלט דיגיטלי/PCM 48kHz	20 הרץ~20 קילוהרץ (3± דציבלים)
דירוג עגינה	iPad	5 וולט 2.0 אמפר
	iPod	5 וולט 1.0 אמפר
	Galaxy	5 וולט 1.0 אמפר
USB	A סוג	USB 1.1
	אספקת זרם ישר	500mA
רשת	אתרנט	מסוף 100BASE-TX
	LAN אלחוטי	מובנה
	אבטחה	WEP (פתוח) WPA-PSK (TKIP) WPA2-PSK (AES)
	WPS(PBC/PIN)	נתמך

* הערכים של יחס אות לרעש, עיוות, הפרדה ורגישות שימושית מבוססים על המידות שנקבעו על פי הקווים מנחים של ארגון AES (Audio Engineering Society).

* מפרט נומינלי

- Samsung Electronics Co., Ltd שומרת את הזכות לשנות את המפרטים ללא התרעה.
- המשקל והמידות המצוינים הם משוערים.
- מהירויות רשת של-10Mbps או פחות אינן נתמכות.
- לקבלת מידע אודות אספקה וצריכת חשמל, עיינו בתווית המודבקת על-גבי המכשיר.

Open Source Announcement

לשאלות ובקשות בכל הנוגע למקור פתוח, צרו קשר עם Samsung בכתובת הדוא"ל.
(oss.request@samsung.com).

• מוצר זה משתמש במספר תוכנות המופצות על-ידי Independent JPEG Group.

FLAC decoder, Copyright (C) 2001,2002,2003,2004,2005,2006,2007 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.“

Ogg/Vorbis decoder, Copyright (c) 2002, Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

יצירת קשר עם SAMSUNG WORLD WIDE

אם יש לכם שאלות או הערות הנוגעות למוצרי Samsung, צרו קשר עם מרכז שירות הלקוחות של SAMSUNG.

אזור	מרכז מידע ☎	אתר אינטרנט
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) for PLDT 1-800-3-SAMSUNG(726-7864) for Digitel 1-800-8-SAMSUNG(726-7864) for Globe 02-5805777	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
THAILAND	1800-29-3232 02-689-3232	www.samsung.com
TAIWAN	0800-329-999 0266-026-066	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com
▪ Middle East		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
OMAN	800-SAMSUNG(726-7864)	www.samsung.com
KUWAIT	183-2255	www.samsung.com
BAHRAIN	8000-4726	www.samsung.com
Egypt	08000-726786	www.samsung.com
JORDAN	800-22273	www.samsung.com
IRAN	021-8255	www.samsung.com
Morocco	080 100 2255	www.samsung.com
Saudi Arabia	9200-21230	www.samsung.com
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com
Ghana	0800-10077 0302-200077	www.samsung.com
Cote D' Ivoire	8000 0077	www.samsung.com
Senegal	800-00-0077	www.samsung.com
Cameroon	7095- 0077	www.samsung.com
KENYA	0800 724 000	www.samsung.com
UGANDA	0800 300 300	www.samsung.com
TANZANIA	0685 88 99 00	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com

Code No. AH68-02435G (01)